

# ZOOM SERIES

WIFI SMART APP



“Original instructions”

# Content

<b>Download and install App</b>	1
<b>Configuration</b>	1
<b>Functions introduction</b>	3
User registration	3
Personal setting	4
Control functions	6
Menu functions	15

The software is subject to be updated without prior notice.

# Operation of Smart Control (Smart Phone, Tablet PC)

## Operation Instructions

### Download and install App

Scan the following QR code with your smart phone and download Wifi Smart.

Android:



iPhone:



Install the App according to its guidance. When successfully installed, your smart phone homepage will show icon

Android:

<http://smart.ewpe.com.cn:8010/WiFiSmart/android/WiFiSmart.apk>

iPhone:

<https://itunes.apple.com/app/wifi-smart/id1044543890?l=en&mt=8>

### Configuration


Before operation, please finish the following configuration in order to realize Wifi control and the connection between air conditioner and intelligent device.

1.Short-distance control setting for air conditioner using wifi hotspot


Step 1: Air conditioner wifi is set to AP mode in factory. You can search the air conditioner wifi hotspot through your smart phone. The name of wifi hotspot is the last 8 numbers of the air conditioner mac address. Password is 12345678.



# Operation of Smart Control (Smart Phone, Tablet PC)

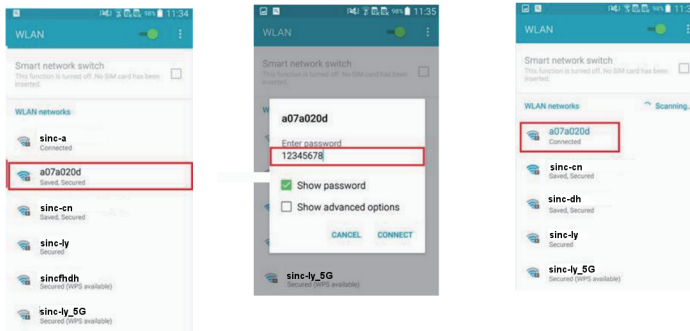


Step 2: Open App and the screen will show the air conditioner that you just connected. Click this air conditioner to enter and realize short-distance control, as shown below. Please refer to "Functions introduction" for specific control methods.

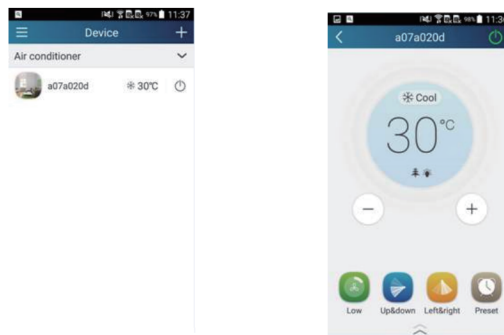

NOTE:One AC can be controlled by 4 cell phone in maximun at the same time.


2.Short-distance and long-distance control setting for air conditioner connecting router

Step 1: Under short-distance control, return to the homepage "Device". Tap  at the top right corner of the homepage "Device". Select "Add device" and enter the page of "Add device". Tap "Manual configuration" and enter the page "Manual configuration".

Step 2: Select the correct network name and enter the password,select the server (The server setting here must keep the same as the server setting in "Settings" mentioned below.Otherwise, remote control will be failed.),then tap the button "Add device" for

# Operation of Smart Control (Smart Phone, Tablet PC)

configuration. At this time, “collocating” is displayed on the APP interface. The buzzer in the indoor unit will give out a sound when collocation is succeeded.

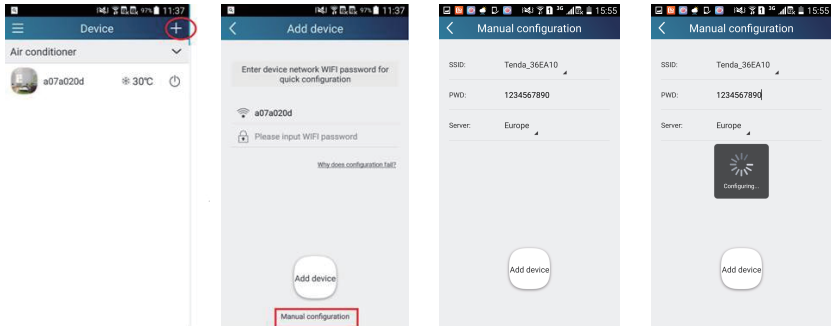

## Functions introduction


### 1.User registration

Purpose: To realize long-distance control

Operation instruction: For the first time login, you have to register a new username. If you already have a username, skip the registration step and enter email address and password on the "Login Page" to log in. If password is forgotten, you can reset the password.


Operation steps:

(1) Select the sever address.

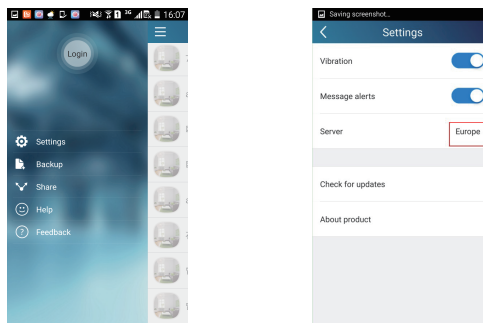


(2) Account login: Slide the page "Device". and enter the menu page on the left. Tap "Login" to enter the page "Register username". New user must first register a username. Tap "Register".


# Operation of Smart Control (Smart Phone, Tablet PC)

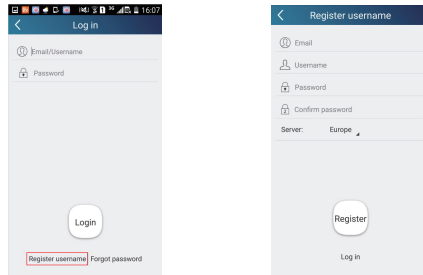

(3) Enter your email address. Wait until you receive the verification code. Enter the code and then tap "OK" to log in.

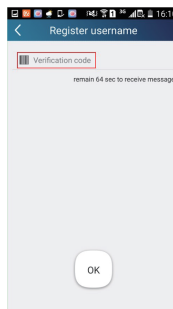

(4) If password is forgotten, you can reset the password with your email address. Tap "Forgot password" and enter the page "Forgot password". Input your registered Email account at first. Tap "Get verification code" to get a email verification code. Enter a new password and tap "OK" to log in.

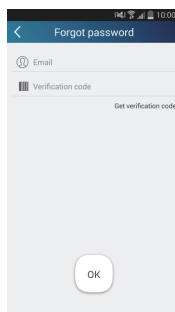

## 2. Personal settings

Purpose: Set name (device name, preset name, etc.) and images (device image) in order to identify a user easily.


### (1) Set device name

After quick configuration, a list of controllable smart devices will be generated. Default name for air conditioner is the last 8 numbers of the air conditioner mac address.


## Operation of Smart Control (Smart Phone, Tablet PC)




Step 1: Tap and hold "a0b417ac" to enter the page "Edit device". Tap "Image" to select the source of image. Select from "Default images" or "Take photo" or "Choose from photos" and save an image.

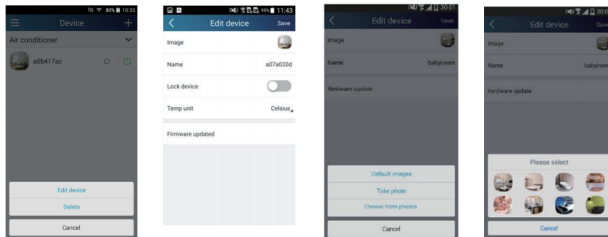

Step 2: Tap "Name" to change device name, Save it and the new device name will be shown. enable button "Lock device" to lock the device, other smart phone can't search the device now. Tap "Temp unit" to change the temperature unit.

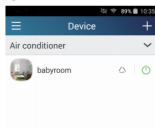


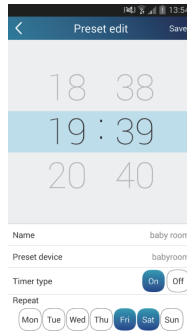
Step 3: Tap "Firmware updated" to upgrade the Firmware of the device, Tap "1.8" the device will upgraded auto.

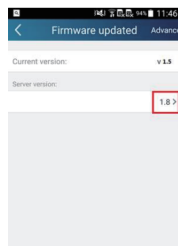


## Operation of Smart Control (Smart Phone, Tablet PC)

### (2) Set preset name

Step 1: Tap  at the top right corner of the homepage "Device". Select "Add preset" and enter the page "Preset edit".



Step 2: Choose the time. Tap "Name". As shown in the picture, its name is "baby room". For timer type, select "On". Then select the repeating days. Save the setting of preset name.

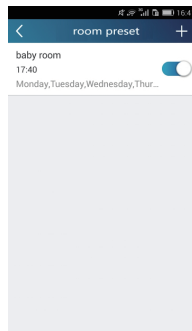

### (3) Set device image

 
Please refer to step 1 in 2(1)


### 3.Control functions



(1) Common control functions: General control on the operation of smart devices (On/Off, temperature, fan speed, mode, etc.) and the setting of advanced functions (air exchange, dry, health, light, sleep, energy saving upper limit).





Step 1: General control Enter the homepage "Device" first. Take "babyhome" as an example.


# Operation of Smart Control (Smart Phone, Tablet PC)

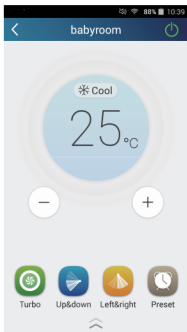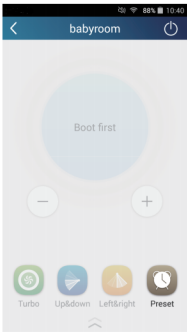

  
Tap "babyroom" and enter the page of air conditioner control. Tap  to turn on the control switch.






Tap  or  to increase or decrease temperature. Tap  to change working mode. Tap  to enter the page of fan speed adjustment.


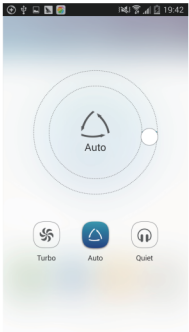


# Operation of Smart Control (Smart Phone, Tablet PC)

Tap  and go around the circle to adjust fan speed.

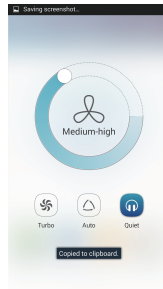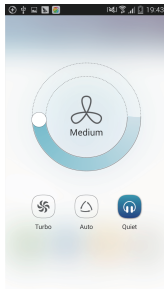


Step 2: Advanced settings Tap  to enter advanced settings. You may select "Air", "Dry", "Health", "Light", "Sleep" or "Energy saving".

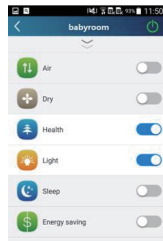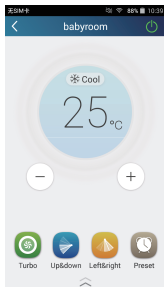


(2) Advanced control functions: Set scene; Preset; Link: Infrared control (only applicable to smart phone with infrared emitter)

Set scene: Preset the operation of several smart devices by one tap.


On the page "Device", tap the image of "Device" to enter the page "Edit scene".

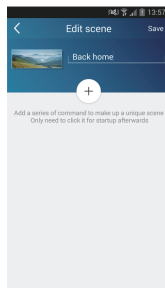


Tap "Add scene" and edit the scene name, for example, "Back home". Add execution devices.

Tap  to add commands. On the page "Select execution device", select the air conditioner named "babyroom". Then select "ON" or "OFF".


# Operation of Smart Control (Smart Phone, Tablet PC)

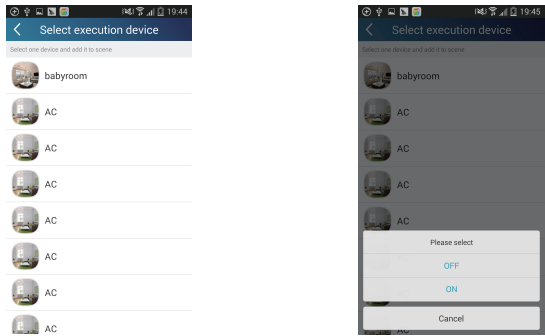

Continue to select the next execution device as instructed above. Tap 0.5s to set the interval.

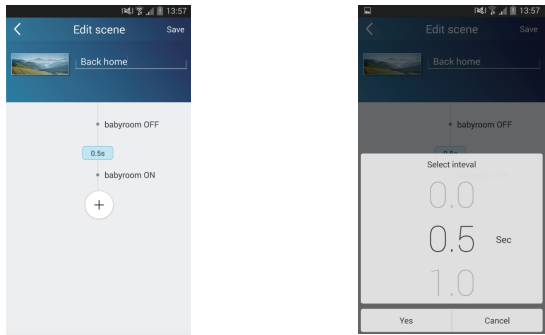

Tap "Save". Tap the scene picture displayed in "Device" home page to send the command. Then the scene "Back home" will be in execution. You may view the execution condition of the scene.

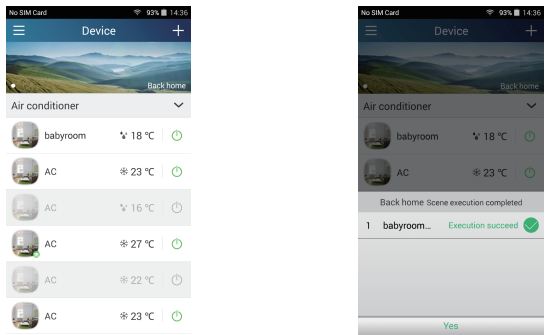




(3) Preset includes single-device preset and multi-device preset  
Single-device preset: This can preset a certain device to be On/Off at a specific time.





# Operation of Smart Control (Smart Phone, Tablet PC)

 On the homepage "Device", take air conditioner "babyroom" as an example.

 Tap  at the bottom of the page "babyroom". Then you will enter the page "Preset edit".

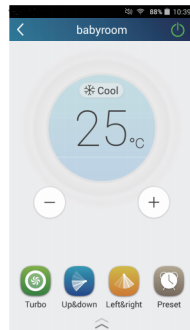


Slide up and down to set the time. If you need to synchronize the time, tap "synchronize". If such "Hint" interface hasn't appeared, please skip this operation procedure.

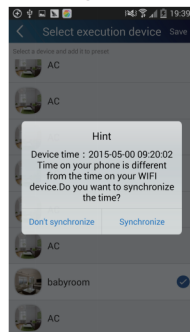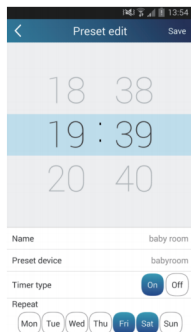

Tap "Name" to customize the preset name.

Preset device can't be selected and it will default to "babyroom". Select "On" for the timer type. Select repeating days to complete the preset.

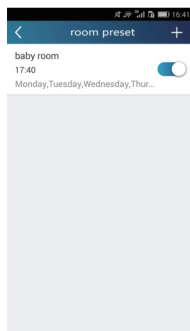


# Operation of Smart Control (Smart Phone, Tablet PC)

Multi-device preset: This can preset multiple devices to execute a command at a specific time.

Please refer to the instructions as how to set preset time, name, timer type and repeating days for a single device.

Tap "Preset device" to select one or more devices. Then return to the page "Device".


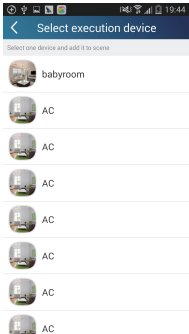


## (4) Link(This function is applicable to partial of models)

Select a master device. When the environment has satisfied the parameters as set in the master device, slave devices will execute commands to realize devices linkage.


Step 1: Set the parameters of master device (Select master device, select environment parameters, select master device status).

Tap **+** at the top right corner of the homepage "Device". Select "Link" and enter the page "Add linkage". Tap "Device parameter" to enter the page "Select device". Take "baby room" as an example. Tap "babyroom".

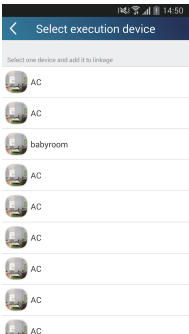
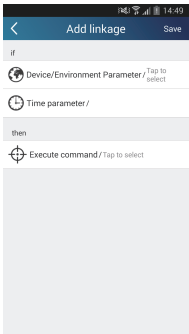



Enter the page "Select environment parameters".



# Operation of Smart Control (Smart Phone, Tablet PC)

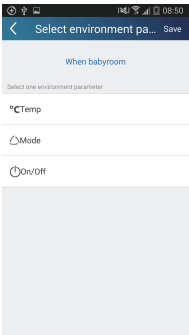

Tap "Temperature" to enter the page "Select temperature parameter". Slide up or down to adjust temperature. Tap "Upper limit" or "Lower limit". Tap "Mode" and "On/Off" to select the status of master device. Then tap "Save".

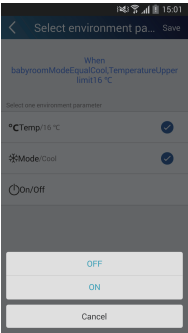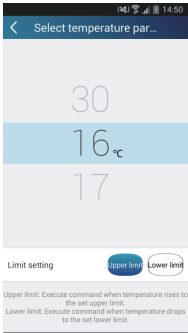


Step 2: Set time parameter for linkage. Tap "Time parameter" to enter the page "Set time". Slide  rightwards to turn on the setting time.

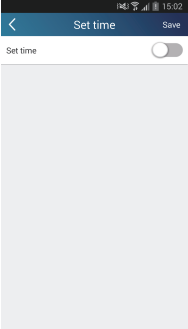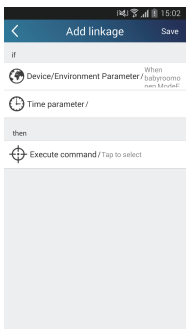


Tap "Execution time"; Then tap "Start" and "Stop" to set start time and stop time respectively. Tap "OK" at the top right corner to save the setting.

# Operation of Smart Control (Smart Phone, Tablet PC)

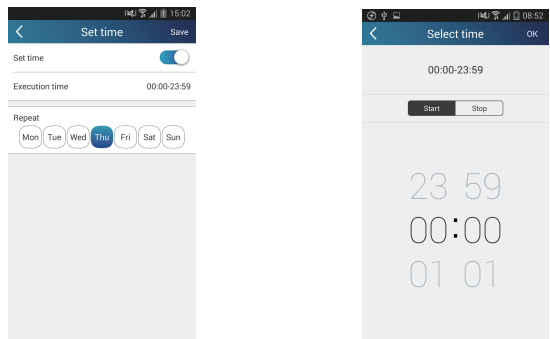


Tap the days below "Repeat" to select the repeating days. Then tap "Save".

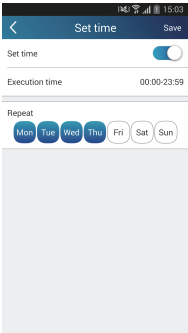


Step 3: Select "Execute command"

Tap "Execute command" and enter the page "Select device".

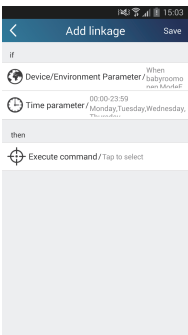


Tap the name of device that you want to control. Tap "ON" or "OFF" and then tap "Save" to complete the linkage.

# Operation of Smart Control (Smart Phone, Tablet PC)

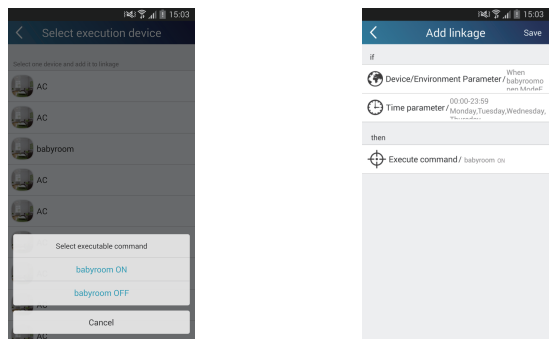


Tap "Save" and then repeat the above steps to set linkage of several scenes.

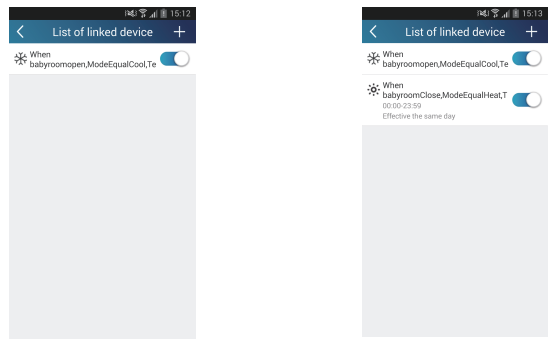




(5) Infrared control (only applicable to smart phone with infrared emitter).  
Function: Smart phone can be used as a remote controller.

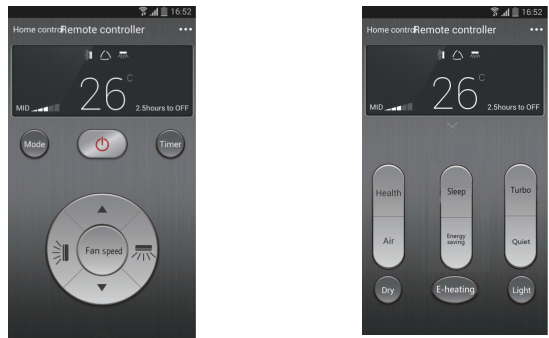
Tap **+** at the top right corner of the homepage "Device". Select "Infrared" and enter the page "Remote controller". Tap **^** and slide up to enter the page of advanced functions.



# Operation of Smart Control (Smart Phone, Tablet PC)

Tap  to turn on the device. Tap  to select mode. Tap  to adjust fan speed and swing angle. Tap "Health", "Energy saving", "Sleep" etc. to set advanced functions.

Tap "Sleep" to enter the page "DIY sleep". Tap the left and right arrows to set sleep time. Tap up and down arrows to adjust temperature at a specific sleep time.

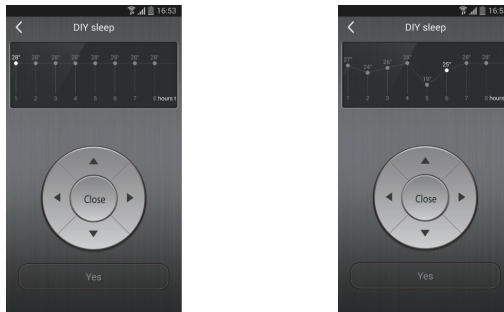

## 4.Menu functions

Menu functions (Share, Set, History, Feedback)


(1) Share: To share quick configuration information and unit's information, including local export and local import.

For local import, you just need to tap "Local import" and wait for the data download.

Local export

Step 1: Export local data to another smart phone.


Enter menu page on the left side and tap "Share" to enter the page "Share". Then tap "Local export".

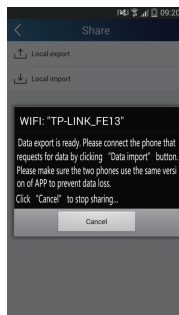

## Operation of Smart Control (Smart Phone, Tablet PC)

Step 2: Another smart phone to be imported.


Tap the model name and wait for the download.

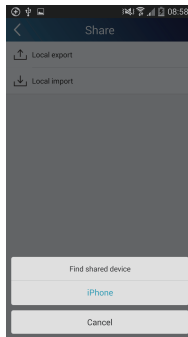


(2) Backup: To keep backup of the quick configuration information and unit's information, including backup to cloud and backup list on the cloud.

Backup to cloud

Enter the menu page on the left and tap "Backup".

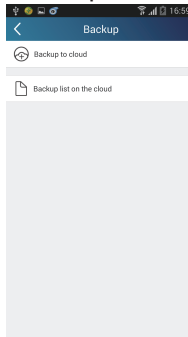


Tap "Backup to cloud" and then tap "Yes". Then wait for the data download.

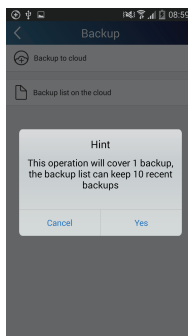


## Operation of Smart Control (Smart Phone, Tablet PC)

Select "Backup list on the cloud". Then backup records will appear. Tap "Record" to download data and recover data to local unit.

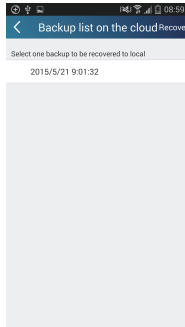

### (3) Settings


User can set vibration, message alerts, server, updates, etc. The server setting here must keep the same as the server setting in "Configuration" mentioned before. Otherwise, remote control will be invalid.

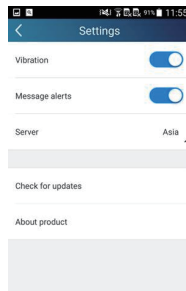

### (4) Feedback

User can feedback suggestions to back-stage management for maintenance and development.

Tap "Feedback". Enter your suggestions and then submit it.

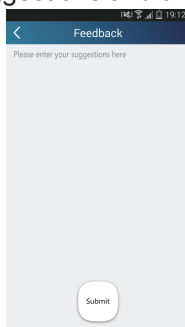





## NOTE CONCERNING PROTECTION OF ENVIRONMENT

---



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

## INFORMATION CONCERNING USED REFRIGERANT MEDIUM

---

This unit is containing fluorinated gases included in the Kyoto protocol. The maintenance and the liquidation must be carried out by qualified personnel.

Type of refrigerant: R410A

The composition of the cooling medium R410A: (50% HFC-32, 50% HFC-125)

The quantity of the refrigerant: please see the unit label.

The value GWP: 2088

GWP = Global Warming Potential

In case of quality problem or other please contact your local supplier or authorized service center.

**Emergency number: 112**

## PRODUCER

---

Producer: SINCLAIR CORPORATION Ltd., 1-4 Argyll St., London W1F 7LD, UK,  
[www.sinclair-eu.com](http://www.sinclair-eu.com)

This product was manufactured in China (Made in China).

## REPRESENTATIVE, TECHNICAL SUPPORT

---

NEPA spol. s r.o.  
Purkyňova 45  
612 00 Brno  
Czech Republic

Tel.: +420 541 590 140  
Fax: +420 541 590 124  
[www.nepa.cz](http://www.nepa.cz)  
[klimatizace@nepa.cz](mailto:klimatizace@nepa.cz)

