

In case of connection only with one indoor unit, it is not necessary to use phone wiring.

- 1) PREPARE ZJ4011
- 2) FIND ALL WIRED CONTROLLERS (MAX.16)
- 3) INSTALL PHONE SOCKETS (PHONE LINE)
- 4) PLACE ZJ4011 WHERE YOU WANT
- 5) CONNECT ZJ4011 TO POWER SUPPLY 230V
- 6) CONNECT ZJ4011 TO PHONE SOCKET
- 7) CONNECT ALL 2 CORE COMMUNICATION CABLES TO PHONE SOCKETS AND TO WIRE CONTROLLERS

FRONT VIEW




ZJ4011A

WIRED CONTROLLERS



COMMUNICATION 2 CORE CABLES


ZJ4011A

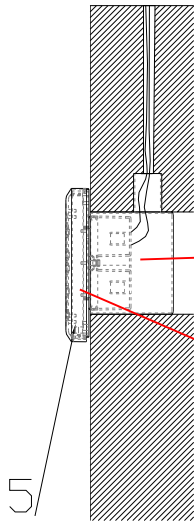

PLACE TO HOLE IN WALL

PLACE ON WALL


ZJ4011A central controller

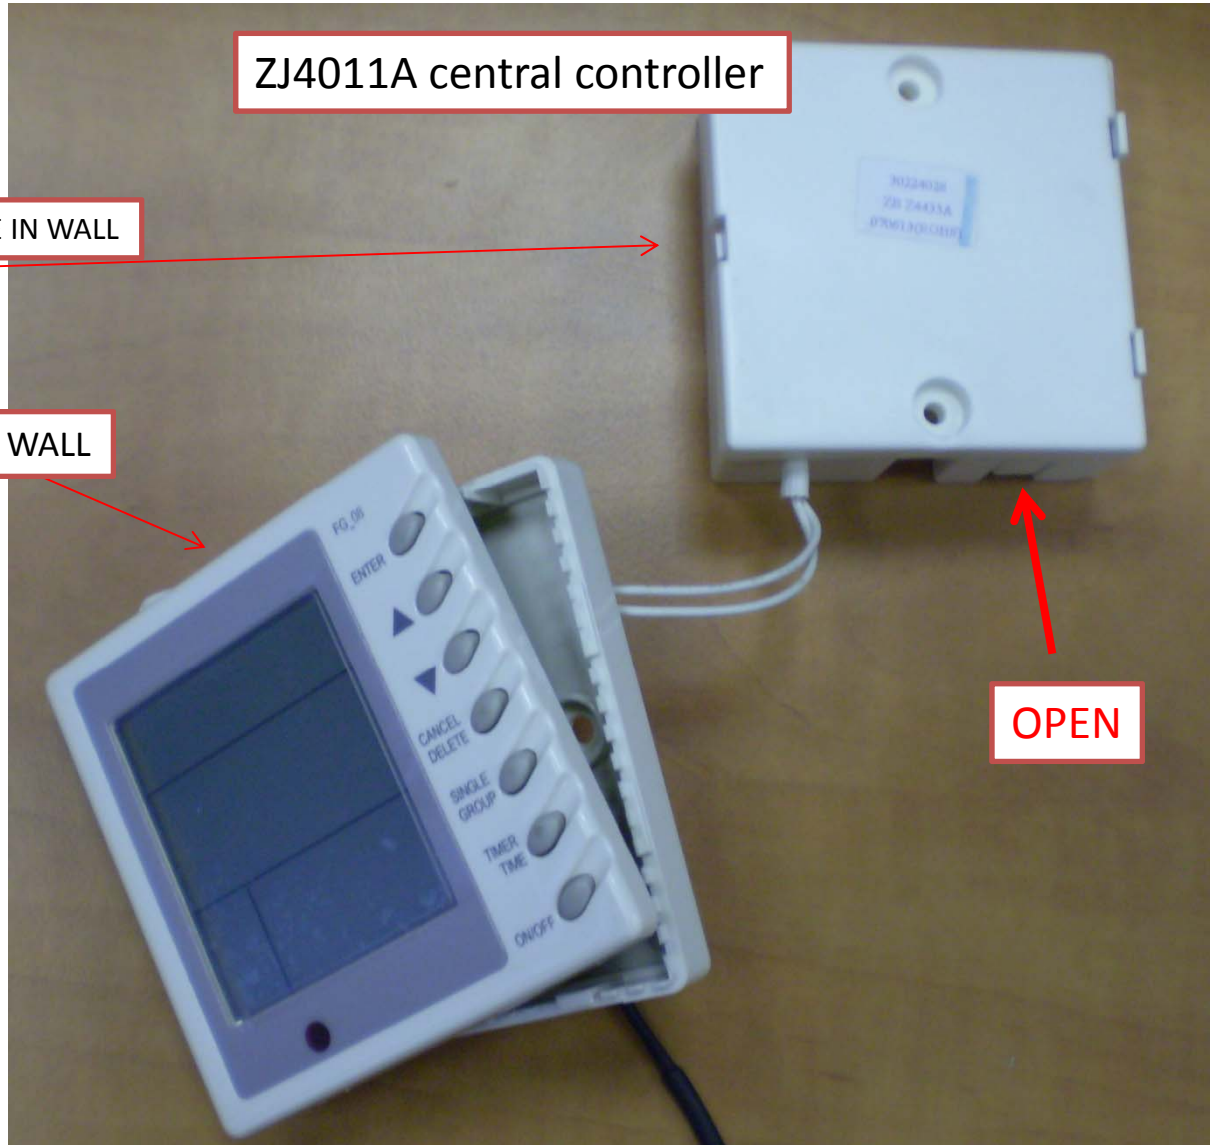

OPEN

CONECT 2 CORE COMMUNICATION CABLES TO ZJ4011A


ZJ4011A

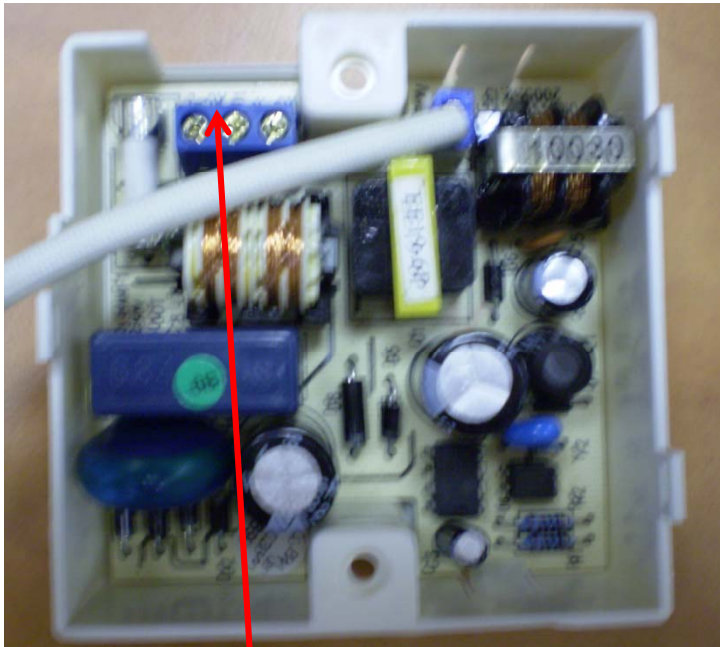

BACK VIEW



CONNECT POWER SUPPLY

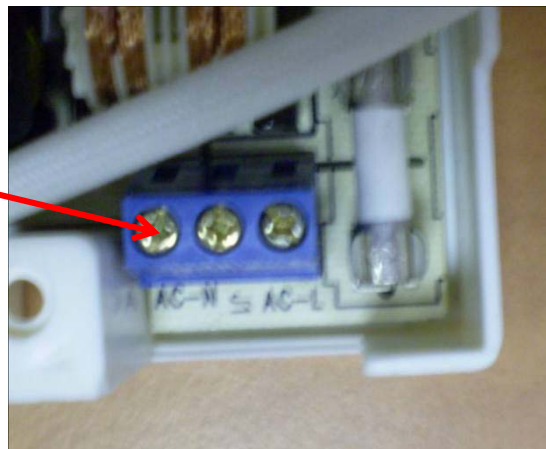


WIRE CONTROLLER



OPEN WIRE CONTROLLER



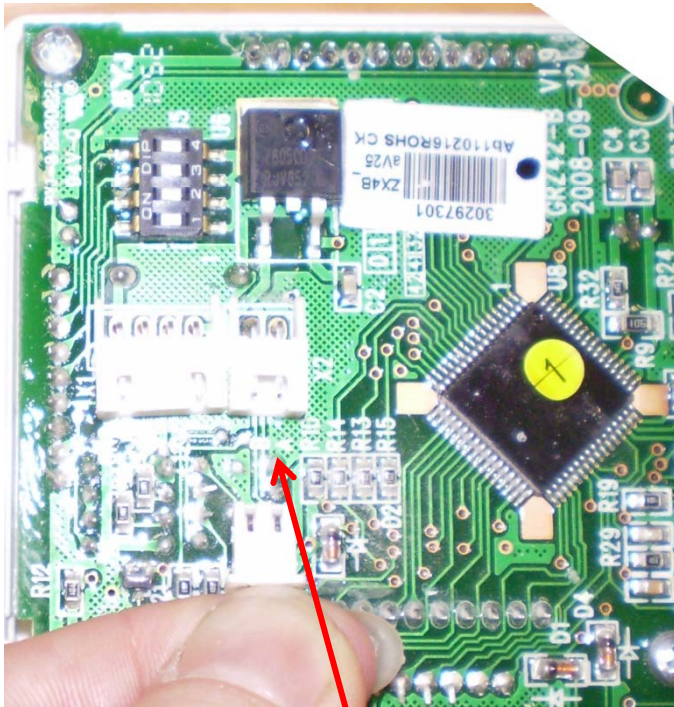

CONNECT 2 CORE COMMUNICATION CABLES INTO WIRE CONTROLLER

CONNECT PHONE PLUGS TO PHONE SOCKET

PHONE SOCKET



PHONE PLUG