

USER'S MANUAL

LOCAL AIR CONDITIONER

AMC-11AN, AMC-14AN



## INTRODUCTION / TECHNICAL DATA

Congratulations on purchasing portable type air conditioner.

Your air-conditioner has been developed and manufactured in accordance with standards of state of the art technology.

Please read the operating instructions carefully before connecting your unit to the power supply in order to prevent damage from improper use. Pay special attention to the safety instructions. If you pass this unit on to a third party, you must also include these operating instructions. Please keep these operating instructions in a safe place for any questions which may arise in future.

Thank you for showing confidence in our product. We hope you enjoy a pleasant room climate with your air-conditioner.

### Original instructions (ver. 02/07-17)

## EASY TO OPERATE AND TO EASY TO MOVE AROUND


- ✓ The unit can be moved easily on rollers from room to room.
- ✓ The air quantity can be adjusted via up to three ventilation levels.
- ✓ The air flow can be very strong and reach up to 5 or 6 metres.
- ✓ Installation by a specialist is not required
- ✓ Simply plug into a normal household socket with an operating voltage of 220-240V/ 50Hz.
- ✓ The extract air hose can be stored in the unit for transport and when not in use.
- ✓ This unit operates in accordance with the heat pump principle. On account of the special, innovative construction of the unit, its heating function is extremely efficient compared to conventional heating units.

## SCOPE OF DELIVERY


1 x unit	1 x bracket air hose	1 x operating instructions
1 x remote control	1 x sir outlet grid	1 x drainage hose 50 cm
1 x air hose 150 cm	1 x coarse filter top, 1 coarse filter bottom	2 x sealing plug
1 x air hose connector		

## BEFORE INITIATION


1. To avoid damage, place the unit in an upright position for at least 24 hours before initiation.
2. Release the holder air hose in the unit and take out the extract air hose.
3. Fasten the air hose before initiating the unit.

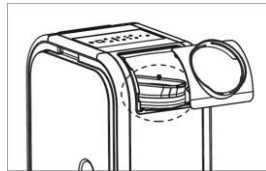

4. Turn the extract air hose in the direction of the arrow 1 displayed and remove it from the unit.
5. Turn the extract air hose in the direction of the arrow 2 displayed and connect it to the unit.

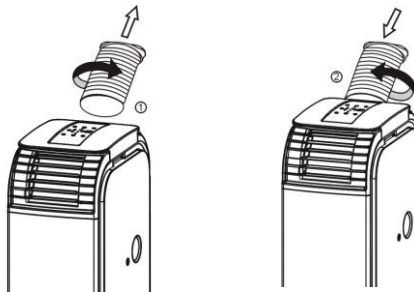


6. Plug the power plug into a socket. Never pull the plug out of the socket with force using the connection line. This can damage the power cable.
7. Since the unit emits hot air, please observe a sufficient minimum safety distance to each wall. (Fig. 1)

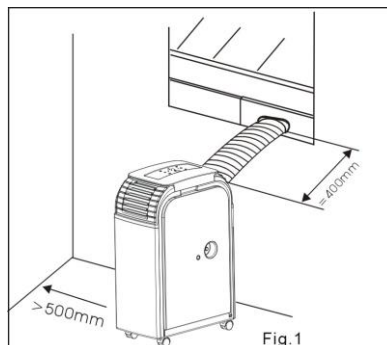


8. Despite the splash water protection, you should not operate the unit in moist areas, such as e.g. swimming baths or similar areas.
9. The colour of the unit can change slightly due to direct solar radiation.
10. The unit is equipped with a special thermal deactivation. This protects the unit from overheating in extreme ambient conditions.
11. Please place the unit so that the air inlet is not impeded, e.g. by furniture or curtains, since this can negatively effect the capacity.
12. Do not expose direct sunlight to shine on the unit, since it may then overheat and automatically deactivate on account of the thermal deactivation.

## NAME OF THE COMPONENTS

1. Operating panel
2. Control lamp
3. Air outlet grid
4. Air hose connection piece
5. Air hose
6. Upper condensation water outlet with rubber plug

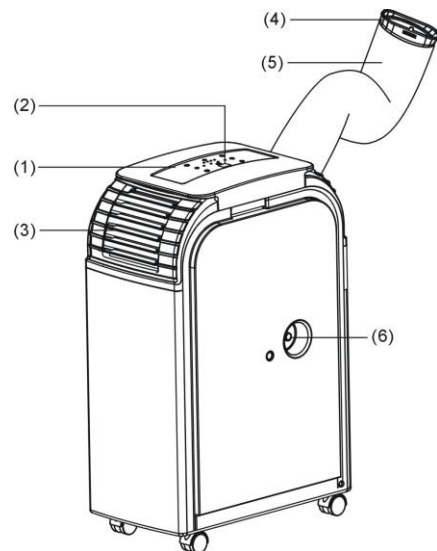


7. Cool inlet
8. Cool Air filter
9. Hot inlet
10. Hot air filter
11. Drain pipe

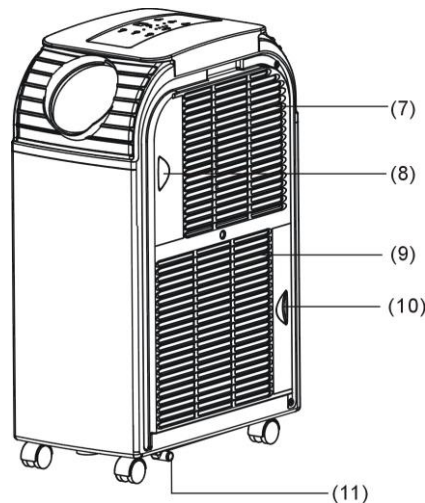

## IMPORTANT INSTRUCTIONS

1. Before initiation, check if the operating voltage specified on the type plate complies with the local network voltage.
2. **DO NOT BLOCK THE VENTILATION.** Make sure that the air outlet and air inlet are never blocked.
3. Only operate the unit on a horizontal surface to ensure no water leaks out.
4. The unit must not be operated in an area with explosive and caustic substances.
5. Clean the air filter regularly. A contaminated air filter reduces capacity.
6. Please wait at least 5 minutes after switching off the unit before switching it back on, to ensure the compressor is not damaged.
7. The compressor of the unit has a power demand of at least 7 amps. Do not use any extension cable with this unit.
8. The unit is designed for the cooling, heating and dehumidification of inside rooms. Other use is excluded.
9. If the power cable is damaged, it must be replaced by a qualified specialist for safety reasons.
10. **The unit is not intended for non stop cooling, for professional use and for cooling in winter in technical rooms, like for example server rooms.**
11. **CAUTION!** This unit may only be used by persons (including children) with reduced physical, sensorial or mental capacity or with insufficient experience and lack of specialist know-how, if such persons are supervised by a person responsible for their safety or who has been trained in the use of the unit. Children should be supervised to ensure they do not play with the unit.

## OPERATING PANEL

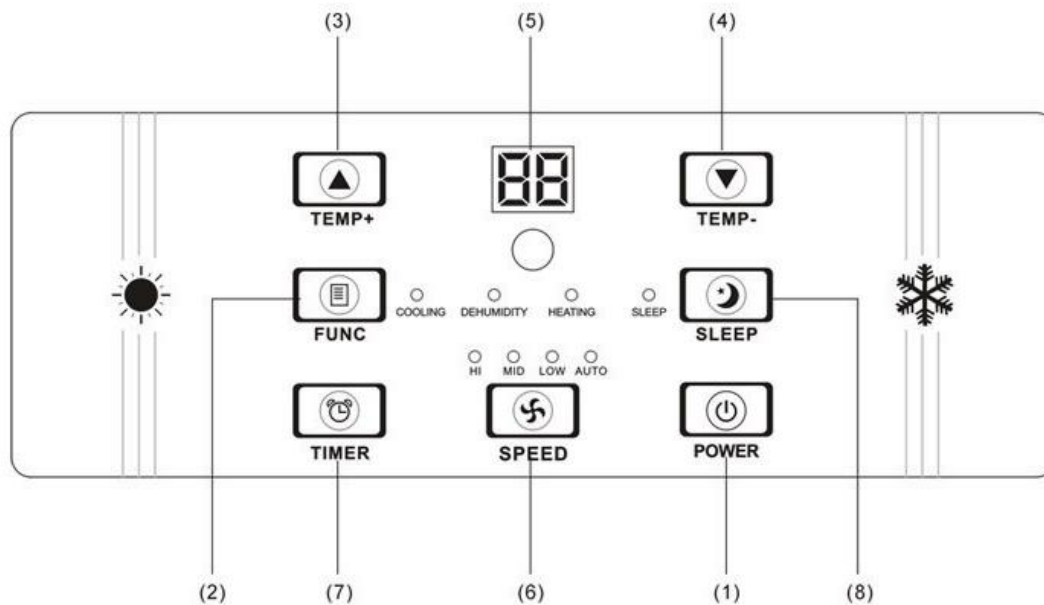

## DESCRIPTION OF FUNCTIONS

1. **[POWER]**  
Press this switch to switch on or off
2. **[FUNC]**  
Press this switch to select between the functions "Cooling", "Heating" or "Dehumidity"
3. **[TEMP+]**  
Press this switch in the cooling function in order to set the required room temperature by 1°C respectively up to a maximum temperature of 30°C.  
Press this switch in the heating function in order to set the required room temperature by 1°C respectively up to a maximum temperature of 25°C
4. **[TEMP-]**  
Press this switch in the cooling function in order to set the required room temperature by 1°C respectively up to a minimum temperature of 17°C.  
Press this switch in the heating function in order to set the required room temperature by 1°C respectively up to a minimum temperature of 15°C
5. **LED-DISPLAY**  
The display shows the required target temperature.  
By pressing the **[TEMP+]** or **[TEMP-]** switch, the required target temperature is briefly displayed. On pressing the **[TIMER]** switch, the number of hours is briefly shown until activation or deactivation. After each manual setting, the display automatically shows the required target temperature. In the dehumidification function, "DH" is shown in the display. Error messages are also shown in the display.
5. **[SPEED]**  
Press this switch to set the ventilation speed to "LOW", "MID" (middle), "HI" (high) or "AUTO" (automatic). If "AUTO" is selected, the ventilator operates at temperature differences larger than 9 degrees at top speed. If the temperature reduces to a difference smaller than 4 degrees, the ventilator switches to middle blower position. If the temperature reduces further until the target temperature, the ventilator switches to the lowest blower position.

## 7. [TIMER]

Programmable time switch with start and residual time

**Starting time:** This function is used to switch on the unit automatically when the time entered has expired. Proceed as follows:

- i) Press [TIMER] switch in Stand-by (this unit is connected but not in operation), to enter the required number of hours after which the unit is to start.
- ii) Select the required function (cooling, heating, dehumidification) and set the required temperature.
- iii) When the set number of hours has expired, the unit starts automatically.

If you press the [POWER] switch before the time has expired, the time programming is deleted. The unit switches on and can be operated in the required operating mode.

**Residual time:** This function is used to automatically deactivate the unit when the time entered has expired. Proceed as follows:

- i) Press the [TIMER] switch during operation and enter the required number of hours after which the unit is to switch off.
- ii) After the flashing of the number of hours on the LED has stopped, you can select the required function (cooling, heating, dehumidification) and the required temperature.
- iii) When the set number of hours has expired, the unit switches on automatically.

If you press the [POWER] switch before the time has expired, the Timer programming is deleted and the unit switches off.

## 8. [SLEEP]

Using this key you can set the sleep function of the unit. The microprocessor integrated in the unit will raise the pre-set temperature by 2°C per hour up to a maximum of 4°C after 2 hours and maintain this temperature until the set time has expired..

If you use the sleep function, first set the time switch to the set hours as described in the functions

**Residual time** or **Starting time**. Then press the [TIMER] switch until the required hours appear on the display. After the hour display, the display switches automatically to the previous set temperature display. To change the temperature, press the switch [TEMP+] or [TEMP-]. With each press on the switch, the temperature increases or decreases by 1°C.

## COOLING


- ✓ It is recommended to start the unit early on hot days, thus avoiding heating up of the room.
- ✓ This unit has a self-evaporation function for condensation water, so that it is normally not necessary to empty the water tank in cooling mode. The drainage hose need not be connected. Please make sure that the outlet is closed with the rubber cap during operation.

(This does not apply in the case of high air humidity. If the unit operates in cooling mode for a longer period and especially at a time of year with high air humidity, the condensation tank may be full. The control lamp will remind you to empty the water. Refer to error message E4. In such a case, empty the water tank via the condensation water outlet. If continuous high air humidity is likely, it is recommended to drain the condensation continuously via the drainage hose.)

### **COOLING IN INDOOR OPERATION**

The unit stands in the room to be cooled.

Connect the air hose and the air outlet grid to the unit as displayed in the illustration; the air hose connection piece and air outlet grid need to be exchanged.

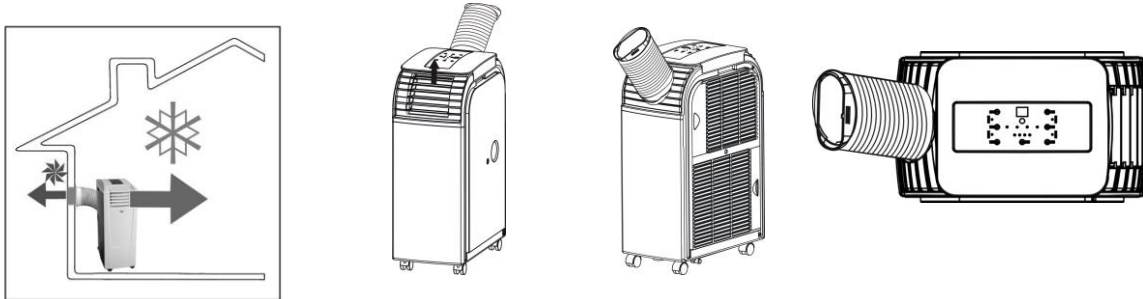

The warm extract air must be emitted from the room via the air hose. This can be executed e.g. via a tilted window, a door or wall aperture. Make sure that no warm outside air can enter the room. For effective cooling, we recommend our selection of various accessories which reduce or prevent entry of warm air into the room.


Place the function to "COOLING". Set the target temperature using the temperature control. The settable temperature range is between 17 and 30 degrees target temperature. The unit must only be used in an ambient temperature of maximum 32°C.

Note: After switching on, or over, the ventilator operates, but the compressor only starts after the control lamp has flashed for three minutes. Cooling effect may require a further 10 minutes. Further information is available under the item, "Troubleshooting".

### **COOLING IN OUTDOOR OPERATION**

The unit is outside the room to be cooled.

Connect the air hose and the air outlet grid to the unit as displayed in the illustration; the air hose connection piece and air outlet grid need to be exchanged.

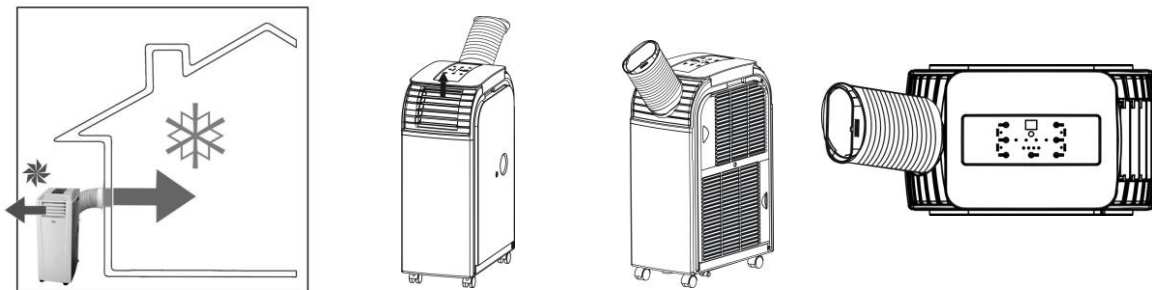

Place the unit in the shade if possible and in a cool place in order to increase efficiency and to avoid overheating. At an ambient temperature of over 32 degrees, the unit may deactivate. If this occurs continuously, we recommend you temporarily use the INDOOR OPERATION of the unit. We recommend that a drainage hose for condensation water be connected.

Set the function to “COOLING”. The settable temperature range is between 17 and 30 degrees. This can be set using the temperature control.

The air with high oxygen content cooled by the unit is fed into the room via the air hose. This can be executed e.g. via a tilted window, a door or wall aperture. Make sure that no warm outside air can enter the room. For effective cooling, we recommend our selection of various accessories which reduce or prevent entry of warm air into the room, or via the remote control.

Using the “Comfort Control Kits” you can also control the unit from inside using the remote control. The “Comfort Control Kit” set is additional accessories. It is possible to buy it at the seller or supplier.

After switching on, or over, the ventilator operates, but the compressor only starts after the control lamp has flashed for three minutes. Cooling effect may require a further 10 minutes. Further information is available under the item, “Troubleshooting”.

## HEATING


- ✓ On cold days it is recommendable to start the unit early in order to avoid intensive cooling of the room.
- ✓ For the heating function and to improve the heating effect and avoid lower temperatures (lower than 17°C) we recommend you remove the rubber plug from the condensation water outlet and allow the condensation water to leak out of the unit using the drainage hose. However, the drainage hose does not have to be connected in the heating mode, Please make sure that the condensation water outlet is closed with the rubber cap during operation. In such a case, proceed analogously to the emptying of the water tank in the cooling function.
- ✓ The heating function of the unit must not be operated at a room temperature of more than 23°C or less than 7°C. The unit can also be operated with heating function, if the outside temperature is lower than 7°C. However, you must then ensure that the unit is operated inside and the room temperature is at least 7°C.

**Caution: In the heating mode, separate setting of the ventilator is not provided, since the highest ventilation level is already preset to avoid overheating of the unit.**

### HEATING IN INDOOR OPERATION

The unit is in the room to be heated.

**Caution: Connect the air hose and the air outlet grid to the unit as displayed in the illustration; the air hose connection piece and air outlet grid need to be exchanged.**

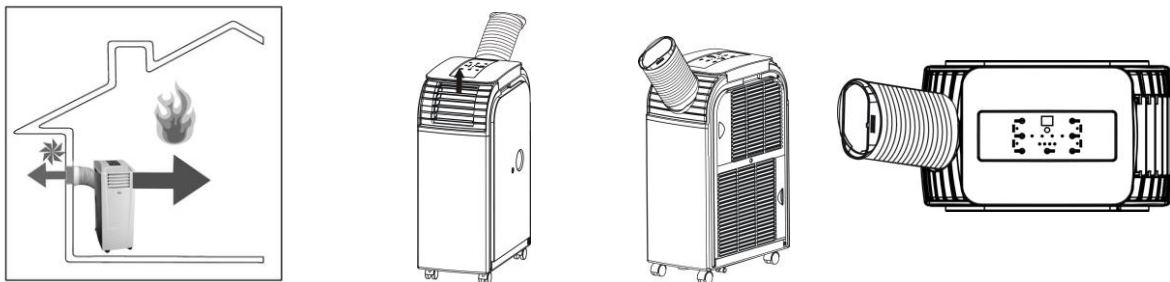

The cold extract air has to be fed out of the room via the air hose. This can be executed e.g. via a tilted window, a door or wall aperture. Make sure that no warm outside air can enter the room. For effective heating, we recommend our selection of various accessories which reduce or prevent entry of cold air into the room.


Set the function to “Heating”. The settable temperature range is between 15 and 25 degrees target temperature. You can set this using the temperature control.

After switching on, or over, the ventilator operates, but the compressor only starts after the control lamp has flashed for three minutes. Cooling effect may require a further 10 minutes. Further information is available under the item, “Troubleshooting”.



## HEATING IN OUTDOOR OPERATION

The unit is outside the room to be heated. Outdoor operation is ideal for the transition period in which outside temperatures do not fall below 7 degrees. (If the outside temperature should however fall below 7 degrees continuously, we recommend indoor operation). Connect the air hose and the air outlet grid to the unit as displayed in the illustration, or the air hose connection piece and air outlet grid need to be exchanged.

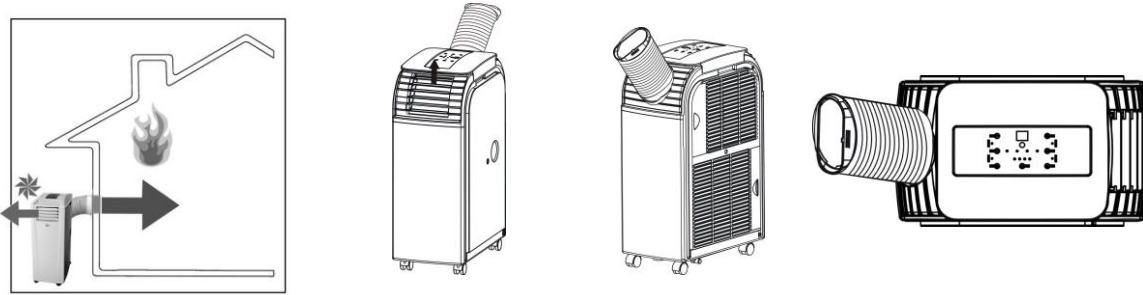

Set the function to "Heating". The settable temperature range is between 15 and 25 degrees target temperature. You can set this using the temperature control.

The air with high oxygen content heated by the unit is fed into the room via the air hose. This can be executed e.g. via a tilted window, a door or wall aperture. Make sure that no warm outside air can enter the room. For effective heating, we recommend our selection of various accessories which reduce or prevent entry of cold air into the room.

Using the "Comfort Control Kit" you can also control the unit from inside using the remote control. The "Comfort Control Kit" set is additional accessories. It is possible to buy it at the seller or supplier.


After switching on, or over, the ventilator operates, but the compressor only starts after the control lamp has flashed for three minutes. Cooling effect may require a further 10 minutes. Further information is available under the item, "Troubleshooting".

## DEHUMIDIFICATION

Humidity is extracted from the air, collected in the water tank and discharged via the condensation water outlet. Only air the room if the humidity of the outside air is below that in the inside room. Set the function to "Dehumidity".

**Caution: In the dehumidify mode, separate setting of the ventilator is not provided, since the lowest ventilation level is already preset to ensure efficient dehumidification of ambient air.**

The rubber plug of the condensation water outlet is removed and a drainage hose attached. To collect the condensation water easily in a tank, a drainage hose is included in the scope of delivery which you can connect to the upper condensation water outlet. Allow water to flow out continuously in order to achieve higher dehumidification capacity. In the dehumidify mode, you must not feed the room air outside with the extract air hose.

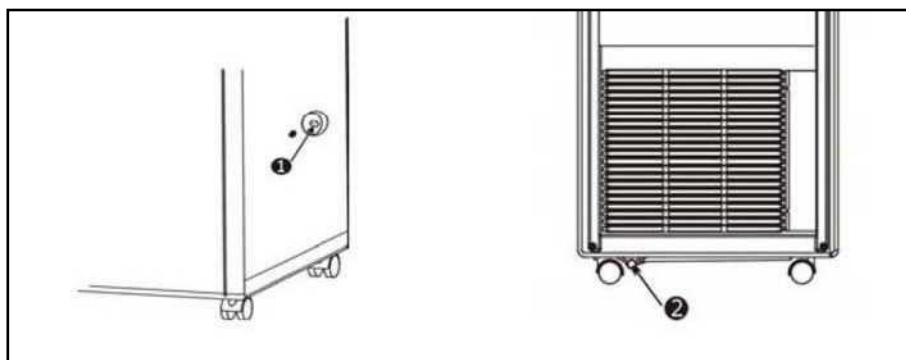

## CLEANING AND MAINTENANCE

### MAINTENANCE

PLEASE REMOVE THE POWER PLUG FROM THE SOCKET BEFORE CLEANING THE UNIT.

#### COARSE FILTER

The air filters on the side of the unit can be simply removed by pulling the frame sideways. When cleaning, use a vacuum cleaner with brush or wash the filters under running, warm water and dry them with a soft cloth!

Please clean the coarse filters before initial use, and regularly when in use.

## ERROR MESSAGES


**The local air conditioner is equipped with a 3-minute compressor-delay system which means the compressor needs 3 minutes to start.**

**This affects the switching on of the unit (POWER) as well as switching over from one function to the next, e.g. dehumidify to cooling or heating.**



ERROR/ PROBLEM	CAUSE	REMEDY
Can I switch the unit on immediately after unpacking it?		No. The unit must be placed upright for at least 24 hours after every transport. Otherwise the compressor may be damaged and there is no capacity.
When switching on the unit I sense a smell. What should I do.	<b>Production-related cause or incorrect storage of unit at e.g. dusty areas.</b>	Odour development can arise on first use and after a longer period of non-use by storing in unsuitable areas (e.g. dusty areas). Run the unit for ½ a day. The smell will disappear after a while. In the case of intensive odour development, air the room.
Can I operate the unit WITHOUT the extract air hose.		No. To achieve temperature adjustments, surplus heat or coldness must be discharged.
How can I increase the efficiency of the unit?		External circumstances exist which may impact the efficiency of the unit. Room insulation, use of wall/window adapter, ratio of window space (solar radiation), operation of electrical units in the room (EDP), presence of several persons in the room. You can increase the efficiency of the unit accordingly by adjusting such circumstances.
Compressor does not activate		Depending on ambient temperatures and unit type it may take approx. 10 minutes after starting the compressor until the cooling/heating capacity is reached.
unit deactivates.		On reaching the set required temperature, the unit switches off automatically. Check manual setting of the required temperature as well as the TIMER setting.
How is the m <sup>2</sup> or m <sup>3</sup> data of the manufacturer calculated		The m <sup>2</sup> or m <sup>3</sup> data of the manufacturer for the various units are average values related to a room height of 2.5 metres. It must be considered that such data can be clearly <b>underscored</b> or <b>exceeded</b> under certain circumstances. Circumstances which work against efficiency of the units include e.g. bad insulation of the building, large window areas, south facing, attic apartment, many additional heat sources, such as e.g. number of persons, EDP, light, kitchen units, washing units etc.
Unit does not cool correctly		You achieve the most effective and economical cooling comfort if you already cool the room to be cooled when the room temperature is not yet heated up. Air conditioners operate more effectively if the temperature is to be maintained. To drastically cool the air and

		inventory in a fully heated room requires much more time and energy.
<b>E1</b>	<b>Room temperature <u>outside</u> the function range:</b>  <b>Room temperature <u>inside</u> the function range:</b>	Observe all data in these operating instructions concerning function range.  New measurement of start temperature. Please switch the unit off and start it again after approx. 30 minutes. If the error occurs continuously, the unit requires specialist inspection.
<b>E2</b>	<b>Temperature of the cooling agent lines too high or too low</b>	Temporary error on measuring output temperature. Please switch the unit off and start it again after approx. 30 minutes. If the error occurs continuously, the unit requires specialist inspection.
<b>E4</b>	<b>Water tank full</b>	If the water tank is full, the warning sign "E4" appears in the display. To restart operation of the unit, please remove the plug of the condensation water outlet to allow water to leak out. Please use an appropriate collection tank. When the water has been completely removed, please start the unit again. The unit can now be used as usual.
<b>DF</b>	<b>Defrosting mode</b>	This procedure is completely normal and protects the system from icing and failure. The unit starts automatically after approx. 15 minutes again (depending on the function setting). This procedure repeats itself regularly.
<b>Switching the units from °F to °C and viceversa.</b>	<b>Solution</b>	Please switch off the unit to STAND-BY mode by pressing the button POWER on the unit (the unit is plugged in). Hold for 5-10 seconds button FUNC on the unit and after a beep sound switch on the unit by button POWER.

# WIRING DIAGRAM

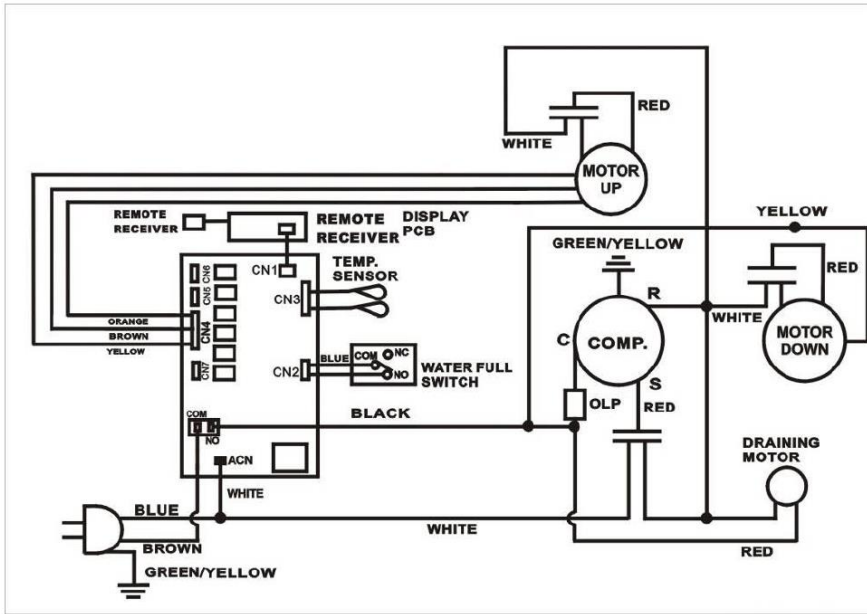

# ENERGY LABEL

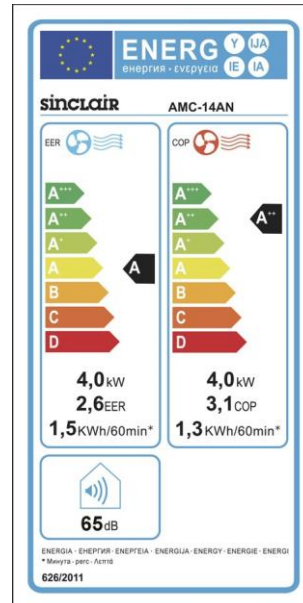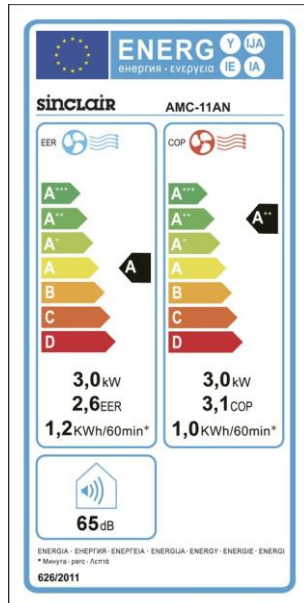

## TECHNICAL PARAMETERS

Category	Local air conditioner		
Model name	AMC-11AN		
Description	Symbol	Value	Unit
Rated capacity for cooling	$P_{rated}$ for cooling	3,0	kW
Rated capacity for heating	$P_{rated}$ for heating	3,0	kW
Rated power input for cooling	$PEER$	1,28	kW
Rated power input for heating	$PCOP$	1,1	kW
Rated Energy efficiency ratio	$EER_d$	2,6	-
Rated Coefficient of performance	$COP_d$	3,1	-
Power consumption in thermostat-off mode	$P_{TO}$	91,1	W
Power consumption in standby mode	$P_{SB}$	0,47	W
Electricity consumption for cooling	$Q_{SD}$	1,2	kWh / h
Electricity consumption for heating	$Q_{SD}$	1,0	kWh / h
Sound power level	$L_{WA}$	59 / 62 / 65	dB(A)
Global warming potential	GWP	2088	kg ekv. CO <sub>2</sub>
Energy class	cooling / heating	A / A++	-
Refrigerant	type * / weight	R410A / 0,55	/ kg
Optimal room size	area	15 - 25	m <sup>2</sup>
Voltage	-	~ 220 - 240	V
Frequency	-	50	Hz
Rated current	-	5,8	A
Rated air flow	-	350 / 380 / 450	m <sup>3</sup> / h
Hose for hot air	length / diameter	125 / 15	cm
Dehumidifying	-	50,0	litres / day
Dimensions of product	(w x h x d)	300 x 778 x 505	mm
Dimensions of package	(w x h x d)	330 x 815 x 550	mm
Weight of product	-	28,5	kg
Weight with package	-	30,7	kg
Name and address of the manufacturer or of its authorised representative.	Manufacturer: SINCLAIR CORPORATION Ltd., 1-4 Argyll St., London, UK Representative: NEPA spol. s r.o., Purkyňova 45, Brno 612 00, ČR		
Contact details for obtaining more information	www.sinclair-world.com / info@sinclair-solutions.com		

\* R410A (50% HFC-32, 50% HFC-125)

\* GWP: 2088; 1.148 t CO<sub>2</sub> eq.

\* Contains fluorinated greenhouse gases covered by the Kyoto Protocol.

## TECHNICAL PARAMETERS

Category	Local air conditioner		
Model name	AMC-14AN		
Description	Symbol	Value	Unit
Rated capacity for cooling	$P_{rated}$ for cooling	4,0	kW
Rated capacity for heating	$P_{rated}$ for heating	4,0	kW
Rated power input for cooling	$P_{EER}$	1,7	kW
Rated power input for heating	$P_{COP}$	1,5	kW
Rated Energy efficiency ratio	$EER_d$	2,6	-
Rated Coefficient of performance	$COP_d$	3,1	-
Power consumption in thermostat-off mode	$P_{TO}$	91,4	W
Power consumption in standby mode	$P_{SB}$	0,4	W
Electricity consumption for cooling	$Q_{SD}$	1,5	kWh / h
Electricity consumption for heating	$Q_{SD}$	1,3	kWh / h
Sound power level	$LWA$	59 / 62 / 65	dB(A)
Global warming potential	GWP	2088	kg ekv. CO <sub>2</sub>
Energy class	cooling / heating	A / A++	-
Refrigerant	type * / weight	R410A / 0,455	/ kg
Optimal room size	area	25 - 35	m <sup>2</sup>
Voltage	-	~ 220 - 240	V
Frequency	-	50	Hz
Rated current	-	7,7	A
Rated air flow	-	350 / 380 / 450	m <sup>3</sup> / h
Hose for hot air	length / diameter	125 / 15	cm
Dehumidifying	-	70,0	litres / day
Dimensions of product	(w x h x d)	300 x 778 x 505	mm
Dimensions of package	(w x h x d)	330 x 815 x 550	mm
Weight of product	-	30,6	kg
Weight with package	-	32,8	kg
Name and address of the manufacturer or of its authorised representative.	Manufacturer: SINCLAIR CORPORATION Ltd., 1-4 Argyll St., London, UK Representative: NEPA spol. s r.o., Purkyňova 45, Brno 612 00, ČR		
Contact details for obtaining more information	www.sinclair-world.com / info@sinclair-solutions.com		

\* R410A (50% HFC-32, 50% HFC-125)

\* GWP 2088, 0.950t eq. CO<sub>2</sub>

\* Contains fluorinated greenhouse gases covered by the Kyoto Protocol.

## NOTE CONCERNING PROTECTION OF ENVIRONMENT



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

## INFORMATION CONCERNING USED REFRIGERANT MEDIUM

This unit is containing fluorinated gases included in the Kyoto protocol. The maintenance and the liquidation must be carried out by qualified personnel.

Type of refrigerant: R410A

The composition of the cooling medium R410A: (50% HFC-32, 50% HFC-125)

The quantity of the refrigerant: please see the unit label. **Hermetically sealed system.**

AMC-11AN (GWP: 2088, 1.148t CO<sub>2</sub> eq.)

AMC-14AN (GWP: 2088, 0.95t CO<sub>2</sub> eq.)

GWP = Global Warming Potential

In case of quality problem or other please contact your local supplier or authorized service center.

**Emergency number: 112**

## PRODUCER

SINCLAIR CORPORATION Ltd.

1-4 Argyll St.

LONDON

W1F 7LD

United Kingdom

[www.sinclair-world.com](http://www.sinclair-world.com)

This product was manufactured in China (Made in China).

## REPRESENTATIVE AND TECHNICAL SUPPORT

NEPA spol. s r.o.

Purkyňova 45

612 00 Brno

Czech republic

Tel.: +420 541 590 140

Fax: +420 541 590 124

[www.sinclair-solutions.com](http://www.sinclair-solutions.com)

[info@sinclair-solutions.com](mailto:info@sinclair-solutions.com)

