USER'S MANUAL

EN

FOCUS SERIES indoor unit

ASH-09BIF, ASH-13BIF, ASH-18BIF, ASH-24BIF



"Original instructions"

IMPORTANT NOTE:

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.

Content

Operation Notices	
The Refrigerant	1
Precautions	2
Parts Name	7
ScreenOperation Guide	
Buttons on remote controller	
Introduction for icons on display screen	9
Introduction for buttons on remote controller	
Function introduction for combination buttons	
Operation guide Replacement of batteries in remote controller	
Emergency operation	
Maintenance	-
Clean and Maintenance	
Malfunction	
Malfunction analysis	
Installation Notice	
Safety operation of flammable refrigerant	24
Installation dimension diagram	
Safety precautions for installing and relocating the unit	
Tools for installation	
Selection of installation location Requirements for electric connection	
Installation	
Installation of indoor unit	
Check after installation	
Test and operation	
Test operation	35
Attachment	
Configuration of connection pipe	
Pipe expanding method	

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

If it needs to install, move or maintain the air conditioner, please contact dealer or local service center to conduct it at first. Air conditioner must be installed, moved or maintained by appointed unit. Otherwise, it may cause serious damage or personal injury or death.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Explanation of Symbols





Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.

Indicates important but not hazard-related information, used to indicate risk of property damage.



Indicates a hazard that would be assigned a signal word WARNING or CAUTION.



Appliance filled with flammable gas R32.



Before use the appliance, read the owner's manual first.



Before install the appliance, read the installation manual first.



Before repair the appliance, read the service manual first.

The Refrigerant

- To realize the function of the air conditioner unit, a special refrigerant circulates in the system. The used refrigerant is the fluoride R32, which is specially cleaned. The refrigerant is flammable and inodorous. Furthermore, it can leads to explosion under certain conditions. But the flammability of the refrigerant is very low. It can be ignited only by fire.
- Compared to common refrigerants, R32 is a nonpolluting refrigerant with no harm to the ozonosphere. The influence upon the greenhouse effect is also lower. R32 has got very good thermodynamic features which lead to a really high energy efficiency. The units therefore need a less filling.

WARNING:

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacture. Should repair be necessary, contact your nearest authorized Service Centre. Any repairs carried out by unqualified personnel may be dangerous. The appliance shall be stored in a room without continuously operating ignition sources. (for example: open flames, an operating gas appliance or an operating electric heater.) Do not pierce or burn.

Appliance shall be installed, operated and stored in a room with a floor area larger than $X m^2$. (Please refer to table "a" in section of "Safety Operation of Inflammable Refrigerant" for Space X.)

Appliance filled with flammable gas R32. For repairs, strictly follow manufacturer's instructions only. Be aware that refrigrants not contain odour. Read specialist's manual.



Operation and Maintenance

- •This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- •Children shall not play with the appliance.
- •Cleaning and user maintenance shall not be made by children without supervision.
- •Do not connect air conditioner to multi-purpose socket. Otherwise, it may cause fire hazard.
- •Do disconnect power supply when cleaning air conditioner. Otherwise, it may cause electric shock.
- •If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- •Do not wash the air conditioner with water to avoid electric shock.
- •Do not spray water on indoor unit. It may cause electric shock or malfunction.
- •After removing the filter, do not touch fins to avoid injury.
- •Do not use fire or hair dryer to dry the filter to avoid deformation or fire hazard.

WARNING

- Maintenance must be performed by qualified professionals. Otherwise, it may cause personal injury or damage.
- Do not repair air conditioner by yourself. It may cause electric shock or damage. Please contact dealer when you need to repair air conditioner.
- Do not extend fingers or objects into air inlet or air outlet. It may cause personal injury or damage.
- Do not block air outlet or air inlet. It may cause malfunction.
- Do not spill water on the remote controller, otherwise the remote controller may be broken.
- When below phenomenon occurs, please turn off air conditioner and disconnect power immediately, and then contact the dealer or qualified professionals for service.
 - Power cord is overheating or damaged.
 - There's abnormal sound during operation.
 - Circuit break trips off frequently.
 - Air conditioner gives off burning smell.
 - Indoor unit is leaking.
- If the air conditioner operates under abnormal conditions, it may cause malfunction, electric shock or fire hazard.
- When turning on or turning off the unit by emergency operation switch, please press this switch with an insulating object other than metal.
- Do not step on top panel of outdoor unit, or put heavy objects. It may cause damage or personal injury.

Attachment

- Installation must be performed by qualified professionals. Otherwise, it may cause personal injury or damage.
- Must follow the electric safety regulations when installing the unit.
- According to the local safety regulations, use qualified power supply circuit and circuit break.
- Do install the circuit break. If not, it may cause malfunction.
- An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- Including an circuit break with suitable capacity, please note the following table. Air switch should be included magnet buckle and heating buckle function, it can protect the circuit-short and overload.
- Air Conditioner should be properly grounded. Incorrect grounding may cause electric shock.
- Don't use unqualified power cord.
- Make sure the power supply matches with the requirement of air conditioner.Unstable power supply or incorrect wiring or malfunction. Please install proper power supply cables before using the air conditioner.
- Properly connect the live wire, neutral wire and grounding wire of power socket.
- Be sure to cut off the power supply before proceeding any work related to electricity and safety.

- Do not put through the power before finishing installation.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.
- The appliance shall be installed in accordance with national wiring regulations.
- Installation must be performed in accordance with the requirement of NEC and CEC by authorized personnel only.
- The air conditioner is the first class electric appliance. It must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
- The yellow-green wire in air conditioner is grounding wire, which can't be used for other purposes.
- The grounding resistance should comply with national electric safety regulations.
- The appliance must be positioned so that the plug is accessible.
- All wires of indoor unit and outdoor unit should be connected by a professional.
- If the length of power connection wire is insufficient, please contact the supplier for a new one. Avoid extending the wire by yourself.

WARNING

- For the air conditioner with plug, the plug should be reachable after finishing installation.
- For the air conditioner without plug, an circuit break must be installed in the line.
- If you need to relocate the air conditioner to another place, only the qualified person can perform the work. Otherwise, it may cause personal injury or damage.
- Select a location which is out of reach for children and far away from animals or plants. If it is unavoidable, please add the fence for safety purpose.
- The indoor unit should be installed close to the wall.
- Instructions for installation and use of this product are provided by the manufacturer.

Working temperature range

For some models:

	Indoor side DB/WB(°C)	Outdoor side DB/WB(℃)
Maximum cooling	32/23	43/26
Maximum heating	27/-	24/18

NOTICE:


• The operating temperature range (outdoor temperature) for cooling only unit is -15° C ~ 43° C; for heat pump unit is -15° C ~ 43° C.

For some models:

	Indoor side DB/WB($^\circ\!\!\mathbb{C}$)	Outdoor side DB/WB(℃)
Maximum cooling	32/23	43/26
Maximum heating	27/-	24/18


NOTICE:

• The operating temperature range (outdoor temperature) for cooling only unit is -15° C ~ 43° C ; for heat pump unit is -20° C ~ 43° C .

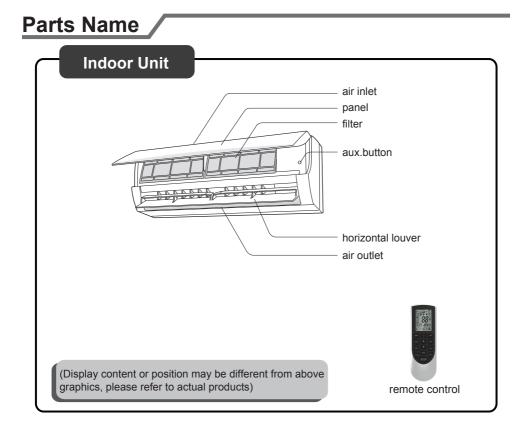

NOTICE:

Actual product may be different from above graphics, please refer to actual products.

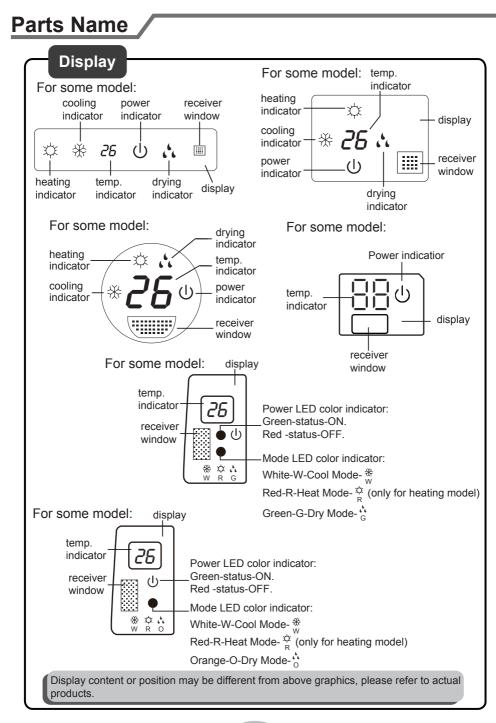

Buttons on remote controller



Introduction for icons on display screen

l feel		Set fan speed
-Operation mode		Send signal
Auto mode Cool mode Dry mode Fan mode Heat mode		Turbo mode 8°C heating function Set temperature is is a general remote controller. Some dels have this function while some do t. Please refer to the actual models. Set time
Clock	★ 0 88:88 boor •	TIMER ON / TIMER OFF Child lock
Light	Temp. display type	Up & down swing
		/

Note:

- This is a general use remote controller, it could be used for the air conditioners with multifunction; For some function, which the model doesn't have, if press the corresponding button on the remote controller that the unit will keep the original running status.
- After putting through the power, the air conditioner will give out a sound. Operation indictor is ON (red indicator). After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon "" on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under off status, set temperature and clock icon will be displayed on the display of remote controller (If timer on, timer off and light functions are set, the corresponding icons will be displayed on the display of remote controller at the same time); Under on status, the display will show the corresponding set function icons.

1 ON/OFF button

Press this button can turn on or turn off the air conditioner. After turning on the air conditioner, operation indicator on indoor unit's display is ON (green indicator. The colour is different for different models), and indoor unit will give out a sound.

2 MODE button

Press this button to select your required operation mode.



- When selecting auto mode, air conditioner will operate automatically according to ex-factory setting. Set temperature can't be adjusted and will not be displayed as well. Press "FAN" button can adjust fan speed. Press "SWING" button can adjust fan blowing angle.
- After selecting cool mode, air conditioner will operate under cool mode. Cool indicator on indoor unit is ON. Press "▲" or "▼" button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting dry mode, the air conditioner operates at low speed under dry mode. Dry indicator on indoor unit is ON. Under dry mode, fan speed can't be adjusted. Press "SWING" button to adjust fan blowing angle.
- When selecting fan mode, the air conditioner will only blow fan, no cooling and no heating. All indicators are OFF. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting heating mode, the air conditioner operates under heat mode. Heat indicator on indoor unit is ON. Press "▲" or "▼" button to adjust set

temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle. (Cooling only unit won't receive heating mode signal. If setting heat mode with remote controller, press ON/OFF button can't start up the unit).

Note:

- For preventing cold air, after starting up heating mode, indoor unit will delay 1~5 minutes to blow air (actual delay time is depend on indoor ambient temperature).
- Set temperature range from remote controller: 16~30°C ; Fan speed: auto, low speed, medium speed, high speed.

3 FAN button

Pressing this button can set fan speed circularly as: auto (AUTO), low(\checkmark), medium (\checkmark), high(\checkmark).



Note:

- Under AUTO FAN speed, air conditioner will select proper fan speed automatically according to ex-factory setting.
- Fan speed under dry mode is low speed.

4 SWING button

Press this button can select up&down swing angle. Fan blow angle can be selected circularly as below:

(horizontal louvers stops at current position)

- When selecting " ; air conditioner is blowing fan automatically. Horizontal louver will automatically swing up & down at maximum angle.
- When selecting "`I、 `I、 -I、 I、, I", air conditioner is blowing fan at fixed position. Horizontal louver will stop at the fixed position.
- When selecting " ڬ▋、≽┃、, air conditioner is blowing fan at fixed angle. Horizontal louver will send air at the fixed angle.
- Hold ">"button above 2s to set your required swing angle. When reaching your required angle, release the button.

Note:

" \geq ", \geq " may not be available. When air conditioner receives this signal, the air conditioner will blow fan automatically.

11

5 TURBO button

Under COOL or HEAT mode, press this button to turn to quick COOL or quick HEAT mode. "S " icon is displayed on remote controller. Press this button again to exit turbo function and "S " icon will disappear.

6 ▲/ ▼ button


- Press "▲" or "▼" button once increase or decrease set temperature 1°C/°F. Holding "▲" or "▼" button, 2s later, set temperature on remote controller will change quickly. On releasing button after setting is finished, temperature indicator on indoor unit will change accordingly. (Temperature can't be adjusted under auto mode)
- When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▼" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons) When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▼" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons)

7 SLEEP button

Under COOL, HEAT or DRY mode, press this button to start up sleep function. "C:" icon is displayed on remote controller. Press this button again to cancel sleep function and "C:" icon will disappear.

8 TEMP button

By pressing this button, you can see indoor set temperature, indoor ambient temperature or outdoor ambient temperature on indoor unit's display. The setting on remote controlleris selected circularly as below:

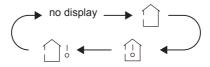

- When selecting " () or no display with remote controller, temperature indicator on indoor unit displays set temperature.
- When selecting ": with remote controller, temperature indicator on indoor unit displays indoor ambient temperature.
- When selecting "_____;" with remote controller, temperature indicator on indoor unit displays outdoor ambient temperature.

Note:

• Outdoor temperature display is not available for some models. At that time, indoor unit receives "

12

- It's defaulted to display set temperature when turning on the unit. There is no display in the remote controller.
- Only for the models whose indoor unit has dual-8 display.
- When selecting displaying of indoor or outdoor ambient temperature, indoor temperature indicator displays corresponding temperature and automatically turn to display set temperature after three or five seconds.

9 I FEEL button

• Please put the remote controller near user when this function is set. Do not put the remote controller near the object of high temperature or low temperature in order to avoid detecting inaccurate ambient temperature. When I FEEL function is turned on, the remote controller should be put within the area where indoor unit can receive the signal sent by the remote controller.

10 LIGHT button

Press this button to turn off display light on indoor unit. " $\dot{\Box} \dot{\Box} = 0$ icon on remote controller disappears. Press this button again to turn on display light. " $\dot{\Box} \dot{\Box} = 0$ icon is displayed.

11 CLOCK button

Press this button to set clock time. " \bigcirc " icon on remote controller will blink. Press " \blacktriangle " or " \checkmark " button within 5s to set clock time. Each pressing of " \blacktriangle " or " \checkmark " button, clock time will increase or decrease 1 minute. If hold " \blacktriangle " or " \checkmark " button, 2s later, time will change quickly. Release this button when reaching your required time. Press "CLOCK" button to confirm the time. " \bigcirc " icon stops blinking.

Note:

- Clock time adopts 24-hour mode.
- The interval between two operation can't exceeds 5s. Otherwise, remote controller will quit setting status. Operation for TIMER ON/TIMER OFF is the same.

12 TIMER ON / TIMER OFF button

• TIMER ON button

"TIMER ON" button can set the time for timer on. After pressing this button, "O" icon disappears and the word "ON" on remote controller blinks. Press "A" or

"▼ "button to adjust TIMER ON setting. After each pressing "▲" or "▼" button,

TIMER ON setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER ON" to confirm it. The word "ON" will stop blinking. "①" icon resumes displaying. Cancel TIMER ON: Under the condition that TIMER ON is started up, press "TIMER ON" button to cancel it.

• TIMER OFF button

"TIMER OFF" button can set the time for timer off. After pressing this button," "" icon disappears and the word "OFF" on remote controller blinks. Press "A" or

"▼" button to adjust TIMER OFF setting. After each pressing "▲" or "▼" button, TIMER OFF setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time.

Press "TIMER OFF" word "OFF" will stop blinking. "O" icon resumes displaying. Cancel TIMER OFF. Under the condition that TIMER OFF is started up, press "TIMER OFF" button to cancel it.

Note:

- Under on and off status, you can set TIMER OFF or TIMER ON simultaneously.
- Before setting TIMER ON or TIMER OFF, please adjust the clock time.
- After starting up TIMER ON or TIMER OFF, set the constant circulating valid. After that, air conditioner will be turned on or turned off according to setting time. ON/OFF button has no effect on setting. If you don't need this function, please use remote controller to cancel it.

Function introduction for combination buttons

Energy-saving function

Under cooling mode, press "TEMP" and " CLOCK" buttons simultaneously to start up or turn off energy-saving function. When energy-saving function is started up, "SE" will be shown on remote controller, and air conditioner will adjust the set temperature automatically according to ex-factory setting to reach to the best energy-saving effect. Press "TEMP" and "CLOCK"buttons simultaneously again to exit energy-saving function.

Note:

- Under energy-saving function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under energy-saving function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and energy-saving function can't operate at the same time. If energy-saving function has been set under cooling mode, press sleep button will cancel energy-saving function. If sleep function has been set under cooling mode, start up the energy-saving function will cancel sleep function.

Function introduction for combination buttons

8℃ heating function

Under heating mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off $8\,^\circ\!C$ heating function. When this function is started up, " $^\circ\!\!$ " and " $8\,^\circ\!C$ " will be shown on remote controller, and the air conditioner keep the heating status at $8\,^\circ\!C$. Press "TEMP" and "CLOCK" buttons simultaneously again to exit $8\,^\circ\!C$ heating function.

Note:

- \bullet Under 8 $^\circ\! \mathbb C$ heating function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under 8℃ heating function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and 8°C heating function can't operate at the same time. If 8°C heating function has been set under cooling mode, press sleep button will cancel 8°C heating function. If sleep function has been set under cooling mode, start up the 8°C heating function will cancel sleep function.
- \bullet Under $^\circ\!\mathrm{F}$ temperature display, the remote controller will display 46 $^\circ\!\mathrm{F}$ heating.

Child lock function

Press " \blacktriangle " and " \checkmark " simultaneously to turn on or turn off child lock function. When child lock function is on, " \bigcirc " icon is displayed on remote controller. If you operate the remote controller, the " \bigcirc " icon will blink three times without sending signal to the unit.

Temperature display switchover function

Under OFF status, press " \blacksquare " and "MODE" buttons simultaneously to switch temperature display between $^\circ\!C$ and $^\circ\!F$.

WIFI Function

Press "MODE" and "TURBO" button simultaneously to turn on or turn off WIFI function. When WIFI function is turned on, the "**WiFi**" icon will be displayed on remote controller; Long press "MODE" and "TURBO" buttons simultaneously for 10s, remote controller will send WIFI reset code and then the WIFI function will be turned on. WIFI function is defaulted ON after energization of the remote controller.


• This function is only available for some models.

Operation guide

- **1.** After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
- **2.** Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
- **3.** Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
- **4.** Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
- 5. Press "SWING" button to select fan blowing angle.

Replacement of batteries in remote controller

- 1. Press the back side of remote controller marked with ". as shown in the fig, and then push out the cover of battery box along the arrow direction.
- 2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.

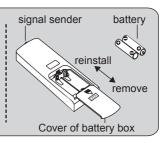


3. Reinstall the cover of battery box.

NOTICE

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

Emergency operation

If remote controller is lost or damaged, please use auxiliary button to turn on or turn off the air conditioner. The operation in details are as below: As shown in the fig. Open panel, press aux. button to turn on or turn off the air conditioner. When the air conditioner is turned on, it will operate under auto mode.

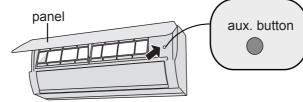

A WARNING:

Use insulated object to press the auto button

Clean and maintenance

- Turn off the air conditioner and disconnect the power before cleaning the air conditioner to avoid electric shock.
- Do not wash the air conditioner with water to avoid electric shock.
- Do not use volatile liquid to clean the air conditioner.

Clean surface of indoor unit


When the surface of indoor unit is dirty, it is recommended to use a soft dry cloth or wet cloth to wipe it.

NOTICE:

• Do not remove the panel when cleaning it.

Clean and Maintenance

Clean filter

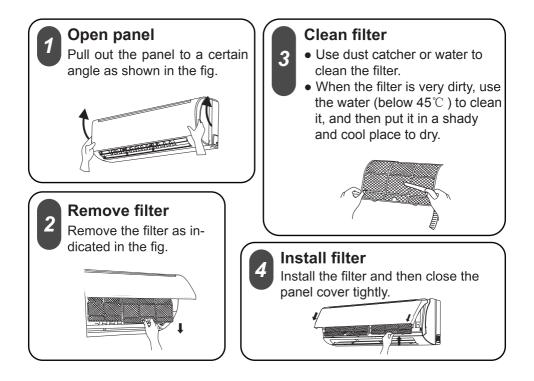

🚹 WARNING

- The filter should be cleaned every three months. If there is much dust in the operation environment, clean frequency can be increased.
- After removing the filter, do not touch fins to avoid injury.
- Do not use fire or hair dryer to dry the filter to avoid deformation or fire hazard.

Clean and Maintenance

NOTICE: Checking before use-season

- 1. Check whether air inlets and air outlets are blocked.
- 2. Check whether air switch, plug and socket are in good condition.
- 3. Check whether filter is clean.
- 4. Check whether mounting bracket for outdoor unit is damaged or corroded. If yes, please contact dealer.
- 5. Check whether drainage pipe is damaged.

NOTICE: Checking after use-season

- 1. Disconnect power supply.
- 2. Clean filter and indoor unit's panel.
- 3. Check whether mounting bracket for outdoor unit is damaged or corroded. If yes, please contact dealer.

Notice for recovery

- 1. Many packing materials are recyclable materials. Please dispose them in appropriate recycling unit.
- 2. If you want to dispose the air conditioner, please contact local dealer or consultant service center for the correct disposal method.

General phenomenon analysis

Please check below items before asking for maintenance. If the malfunction still can't be eliminated, please contact local dealer or qualified professionals.

Phenomenon	Check items	Solution
	 Whether it's interfered severely (such as static electricity, stable voltage)? 	
	 Whether remote controller is within the signal receiving range? 	 Signal receiving range is 8m.
Indoor unit	• Whether there are obstacles?	Remove obstacles.
can't receive remote controller's	 Whether remote controller is pointing at the receiving window? 	 Select proper angle and point the remote controller at the re- ceiving window on indoor unit.
signal or remote controller has no	 Is sensitivity of remote contro- ller low; fuzzy display and no display? 	• Check the batteries. If the power of batteries is too low, please replace them.
action.	 No display when operating remote controller? 	 Check whether remote cont- roller appears to be damaged. If yes, replace it.
	 Fluorescent lamp in room? 	 Take the remote controller close to indoor unit.
		• Turn off the fluoresent lamp and then try it again.
	 Air inlet or air outlet of indoor unit is blocked? 	Eliminate obstacles.
No air emitted from	 Under heating mode, indoor temperature is reached to set temperature? 	 After reaching to set temper- ature, indoor unit will stop bl- owing out air.
indoor unit	 Heating mode is turned on just now? 	 In order to prevent blowing out cold air, indoor unit will be started after delaying for sev- eral minutes, which is a nor- mal phenomenon.

Malfunction analysis

Phenomenon	Check items	Solution
	Power failure?	Wait until power recovery.
	Is plug loose?	Reinsert the plug.
	• Air switch trips off or fuse is burnt out?	• Ask professional to replace air switch or fuse.
Air condit- ioner can't	 Wiring has malfunction? 	• Ask professional to replace it.
operate	 Unit has restarted immediately after stopping operation? 	• Wait for 3min, and then turn on the unit again.
	• Whether the function setting for remote controller is correct?	Reset the function.
Mist is em- itted from indoor unit's air outlet	 Indoor temperature and hum- idity is high? 	• Because indoor air is cooled rapidly. After a while, indoor temperature and humidity will be decrease and mist will disappear.
Set temper- ature can't	 Unit is operating under auto mode? 	• Temperature can't be adju- sted under auto mode. Please switch the operation mode if you need to adjust temperature.
be adjusted	• Your required temperature exceeds the set temperature range?	● Set temperature range: 16℃ ~30℃ .
	Voltage is too low?	Wait until the voltage resumes normal.
Cooling	• Filter is dirty?	Clean the filter.
(heating) effect is not good.	• Set temperature is in proper range?	• Adjust temperature to proper range.
	• Door and window are open?	Close door and window.

Malfunction analysis

Phenomenon	Check items	Solution
Odours are emitted	• Whether there's odour source, such as furniture and cigarette, etc.	Eliminate the odour source.Clean the filter.
Air conditio- ner operates abnormally	• Whether there's interference, such as thunder, wireless devices, etc.	• Disconnect power, put back power, and then turn on the unit again.
"Water flowing" noise	• Air conditioner is turned on or turned off just now?	• The noise is the sound of refrigerant flowing inside the unit, which is a normal phenomenon.
Cracking noise	• Air conditioner is turned on or turned off just now?	• This is the sound of friction caused by expansion and/or contraction of panel or other parts due to the change of temperature.

Malfunction analysis

Error Code

• When air conditioner status is abnormal, temperature indicator on indoor unit will blink to display corresponding error code. Please refer to below list for identification of error code.

Error code	Troubleshooting
E5	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
E8	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
U8	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
H6	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
C5	Please contact qualified professionals for service.
F0	Please contact qualified professionals for service.
F1	Please contact qualified professionals for service.
F2	Please contact qualified professionals for service.
H3	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
E1	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.
E6	It can be eliminated after restarting the unit. If not, please contact qualified professionals for service.

Note: If there're other error codes, please contact qualified professionals for service.

- When below phenomenon occurs, please turn off air conditioner and disconnect power immediately, and then contact the dealer or qualified professionals for service.
 - Power cord is overheating or damaged.
 - There's abnormal sound during operation.
 - Air switch trips off frequently.
 - Air conditioner gives off burning smell.
 - Indoor unit is leaking.
- Do not repair or refit the air conditioner by yourself.
- If the air conditioner operates under abnormal conditions, it may cause malfunction, electric shock or fire hazard.

Qualification requirement for installation and maintenance man

- All the work men who are engaging in the refrigeration system should bear the valid certification awarded by the authoritative organization and the qualification for dealing with the refrigeration system recognized by this industry. If it needs other technician to maintain and repair the appliance, they should be supervised by the person who bears the qualification for using the flammable refrigerant.
- It can only be repaired by the method suggested by the equipment's manufacturer.

Installation notes

- The air conditioner is not allowed to use in a room that has running fire (such as fire source, working coal gas ware, operating heater).
- It is not allowed to drill hole or burn the connection pipe.
- The air conditioner must be installed in a room that is larger than the minimum room area. The minimum room area is shown on the nameplate or following table a.
- Leak test is a must after installation.

	6.5	.0 0			u			00 (/					
	Charge amount (kg)	≤1.2	1.3	1.4	1.5	1.6	1.7	1.8	1.9	2	2.1	2.2	2.3	2.4	2.5
Minimum	floor location	/	14.5	16.8	19.3	22	24.8	27.8	31	34.3	37.8	41.5	45.4	49.4	53.6
	window mounted	/	5.2	6.1	7	7.9	8.9	10	11.2	12.4	13.6	15	16.3	17.8	19.3
alca(III)	wall mounted	/	1.6	1.9	2.1	2.4	2.8	3.1	3.4	3.8	4.2	4.6	5	5.5	6
	ceiling mounted	/	1.1	1.3	1.4	1.6	1.8	2.1	2.3	2.6	2.8	3.1	3.4	3.7	4

table a - Minimum room area (m²)

Maintenance notes

- Check whether the maintenance area or the room area meet the requirement of the nameplate.
 - It's only allowed to be operated in the rooms that meet the requirement of the nameplate.
- Check whether the maintenance area is well-ventilated.
 - The continuous ventilation status should be kept during the operation process.
- Check whether there is fire source or potential fire source in the maintenance area.
 - The naked flame is prohibited in the maintenance area; and the "no smoking" warning board should be hanged.
- Check whether the appliance mark is in good condition.
 - Replace the vague or damaged warning mark.

Welding

• If you should cut or weld the refrigerant system pipes in the process of maintaining, please follow the steps as below:

Safety operation of flammable refrigerant

- a. Shut down the unit and cut power supply
- b. Eliminate the refrigerant
- c. Vacuuming
- d. Clean it with N2 gas
- e. Cutting or welding
- f. Carry back to the service spot for welding
- The refrigerant should be recycled into the specialized storage tank.
- Make sure that there isn't any naked flame near the outlet of the vacuum pump and it's well-ventilated.


Filling the refrigerant

- Use the refrigerant filling appliances specialized for R32. Make sure that different kinds of refrigerant won't contaminate with each other.
- The refrigerant tank should be kept upright at the time of filling refrigerant.
- Stick the label on the system after filling is finished (or haven't finished).
- Don't overfilling.
- After filling is finished, please do the leakage detection before test running; another time of leak detection should be done when it's removed.

Safety instructions for transportation and storage

- Please use the flammable gas detector to check before unload and open the container.
- No fire source and smoking.
- According to the local rules and laws.

Installation dimension diagram

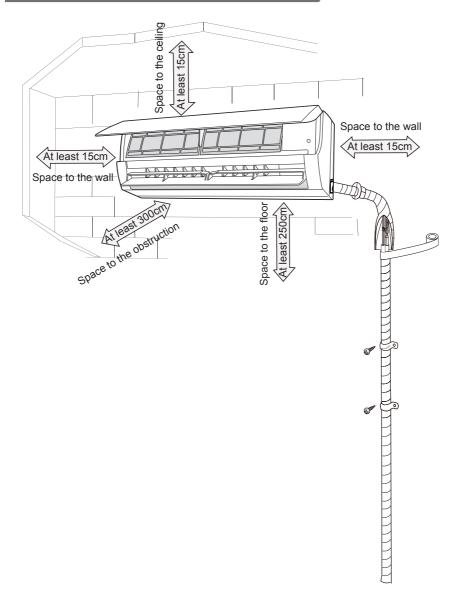

To ensure safety, please be mindful of the following precautions.

M Warning

- When installing or relocating the unit, be sure to keep the refrigerant circuit free from air or substances other than the specified refrigerant. Any presence of air or other foreign substance in the refrigerant circuit will cause system pressure rise or compressor rupture, resulting in injury.
- When installing or moving this unit, do not charge the refrigerant which is not comply with that on the nameplate or unqualified refrigerant. Otherwise, it may cause abnormal operation, wrong action, mechanical malfunction or even series safety accident.
- When refrigerant needs to be recovered during relocating or repairing the unit, be sure that the unit is running in cooling mode. Then, fully close the valve at high pressure side (liquid valve). About 30-40 seconds later, fully close the valve at low pressure side (gas valve), immediately stop the unit and disconnect power. Please note that the time for refrigerant recovery should not exceed 1 minute.

If refrigerant recovery takes too much time, air may be sucked in and cause pressure rise or compressor rupture, resulting in injury.

- During refrigerant recovery, make sure that liquid valve and gas valve are fully closed and power is disconnected before detaching the connection pipe. If compressor starts running when stop valve is open and connection pipe is not yet connected, air will be sucked in and cause pressure rise or compressor rupture, resulting in injury.
- When installing the unit, make sure that connection pipe is securely connected before the compressor starts running.

If compressor starts running when stop valve is open and connection pipe is not yet connected, air will be sucked in and cause pressure rise or compressor rupture, resulting in injury.

• Prohibit installing the unit at the place where there may be leaked corrosive gas or flammable gas.

If there leaked gas around the unit, it may cause explosion and other accidents.

• Do not use extension cords for electrical connections. If the electric wire is not long enough, please contact a local service center authorized and ask for a proper electric wire.

Poor connections may lead to electric shock or fire.

• Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the wires so that their terminals receive no external stresses.

Electric wires with insufficient capacity, wrong wire connections and insecure wire terminals may cause electric shock or fire.

Tools for installation

1 Level meter	2 Screw d	river	3 Impact drill
4 Drill head	5 Pipe exp	bander	6 Torque wrench
7 Open-end wrench	8 Pipe cut	ter	9 Leakage detector
10 Vacuum pump	11 Pressu	re meter	12 Universal meter
13 Inner hexagon spa	anner	14	Measuring tape

• Please contact the local agent for installation.

• Don't use unqualified power cord.

Selection of installation location

Basic requirement

Note:

Installing the unit in the following places maycause malfunction. If it is unavoidable, please consult the local dealer:

- 1. The place with strong heat sources, vapors, flammable or explosive gas, or volatile objects spread in the air.
- 2. The place with high-frequency devices (such as welding machine, medical equipment).
- 3. The place near coast area.
- 4. The place with oil or fumes in the air.
- 5. The place with sulfureted gas.
- 6. Other places with special circumstances.
- 7. The appliance shall nost be installed in the laundry.

Indoor unit

- 1. There should be no obstruction near air inlet .
- 2. Select a location where the condensation water can be dispersed easily and won't affect other people.
- 3. Select a location which is convenient to connect the outdoor unit and near the power socket.
- 4. Select a location which is out of reach for children.
- 5. The location should be able to withstand the weight of indoor unit and won't increase noise and vibration.
- 6. The appliance must be installed 2.5m above floor.
- 7. Don't install the indoor unit right above the electric appliance.
- 8. Please try your best to keep way from fluorescent lamp.

Requirements for electric connection

Safety precaution

- 1. Must follow the electric safety regulations when installing the unit.
- 2. According to the local safety regulations, use qualified power supply circuit and air switch.
- 3. Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or incorrect wiring or malfunction. Please install proper power supply cables before using the air conditioner.
- 4. Properly connect the live wire, neutral wire and grounding wire of power socket.
- 5. Be sure to cut off the power supply before proceeding any work related to electricity and safety. For models with a power plug, make sure the plug is within reach after installation.
- 6. Do not put through the power before finishing installation.
- 7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 8. The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.
- 9. The appliance shall be installed in accordance with national wiring regulations.
- 10. Appliance shall be installed, operated and stored in a room with a floor area larger than "X"m² (see table 1).



Please notice that the unit is filled with flammable gas R32. Inappropriate treatment of the unit involves the risk of severe damages of people and material. Details to this refrigerant are found in chapter "refrigerant".

Grounding requirement

- 1. The air conditioner is the first class electric appliance. It must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
- 2. The yellow-green wire in air conditioner is grounding wire, which can't be used for other purposes.
- 3. The grounding resistance should comply with national electric safety regulations.
- 4. The appliance must be positioned so that the plug is accessible.
- 5. An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.

Installation of indoor unit

Step one: choosing installation location


Recommend the installation location to the client and then confirm it with the client.

Step two: install wall-mounting frame

- 1. Hang the wall-mounting frame on the wall; adjust it in horizontal position with the level meter and then point out the screw fixing holes on the wall.
- 2. Drill the screw fixing holes on the wall with impact drill (the specification of drill head should be the same as the plastic expansion particle) and then fill the plastic expansion particles in the holes.
- 3. Fix the wall-mounting frame on the wall with tapping screws (ST4.2X25TA) and then check if the frame is firmly installed by pulling the frame. If the plastic expansion particle is loose, please drill another fixing hole nearby.

Step three: open piping hole

1. Choose the position of piping hole according to the direction of outlet pipe. The position of piping hole should be a little lower than the wall-mounted frame, shown as below.

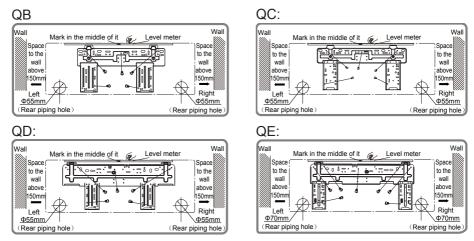


2. Open a piping hole with the diameter of Φ 55 or Φ 70 on the selected outlet pipe position.In order to drain smoothly, slant the piping hole on the wall slightly downward to the outdoor side with the gradient of 5-10°.

Installation of indoor unit


Note:

- Pay attention to dust prevention and take relevant safety measures when opening the hole.
- The plastic expansion particles are not provided and should be bought locally.

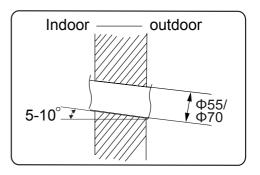


Step four: outlet pipe

 The pipe can be led out in the direction of right, rear right, left or rear left.

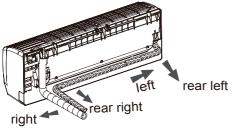


2. When select leading out the pipe from left or right, please cut off the corresponding hole on the bottom case.

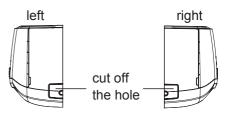

Step five: connect the pipe of indoor unit


- 1. Aim the pipe joint at the corresponding bellmouth.
- 2. Pretightening the union nut with hand.

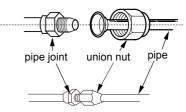

3. Adjust the torque force by referring to the following sheet. Place the open-end wrench on the pipe joint and place the torque wrench on the union nut. Tighten the union nut with torque wrench.

I


Installation of indoor unit

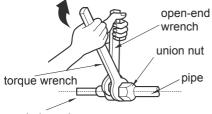

Hex nut diameter	Tightening torque (N·m)
Φ6	15~20
Φ 9.52	30~40
Φ 12	45~55
Φ 16	60~65
Φ 19	70~75

indoor pipe

4. Wrap the indoor pipe and joint of connection pipe with insulating pipe, and then wrap it with tape.

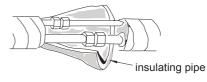


Step six: install drain hose 1. Connect the drain hose to the outlet pipe of indoor unit. drain hose outlet pipe 2. Bind the joint with tape. drain hose outlet pipe tape drain hose Note: Add insulating pipe in the indoor drain hose in order to prevent condensation. • The plastic expansion particles are insulating pipe not provided.

32


Step seven: connect wire of indoor unit

1. Open the panel, remove the screw on the wiring cover and then take down the cover.

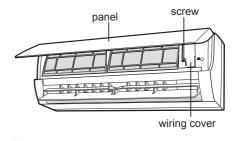


Installation of indoor unit

2. Make the power connection wire go through the cable-cross hole at the back of indoor unit and then pull it out from the front side.

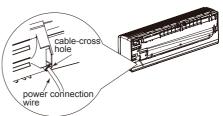

3. Remove the wire clip; connect the power connection wire to the wiring terminal according to the color; tighten the screw and then fix the power connection wire with wire clip.

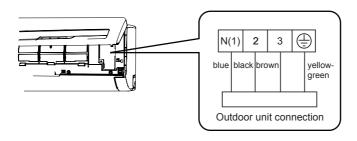

Note: the wiring board is for reference only, please refer to the actual one.

- 4. Put wiring cover back and then tighten the screw.
- 5. Close the panel.


Note:

- All wires of indoor unit and outdoor unit should be connected by a professional.
- If the length of power connection wire is insufficient, please contact the supplier for a new one. Avoid extending the wire by yourself.
- For the air conditioner with plug, the plug should be reachable after finishing installation.
- For the air conditioner without plug, an air switch must be installed in the line. The air switch should be all-pole parting and the contact parting distance should be more than 3mm.


Installation of indoor unit

Step eight: bind up pipe

1. Bind up the connection pipe, power cord and drain hose with the band.

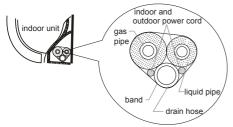

2. Reserve a certain length of drain hose and power cord for installation when binding them. When binding to a certain degree, separate the indoor power and then separate the drain hose.

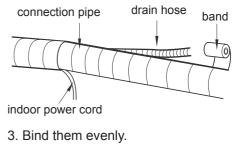

4. The liquid pipe and gas pipe should be bound separately at the end.

Note:


- The power cord and control wire can't be crossed or winding.
- The drain hose should be bound at the bottom.

Step nine: hang the indoor unit

1. Put the bound pipes in the wall pipe and then make them pass through the wall hole.

I

- 2. Hang the indoor unit on the wall-mounting frame.
- 3. Stuff the gap between pipes and wall hole with sealing gum.
- 4. Fix the wall pipe.
- 5. Check if the indoor unit is installed firmly and closed to the wall.

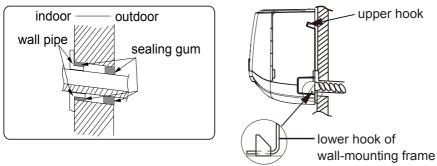

Note:

• Do not bend the drain hose too excessively in order to prevent blocking.

Check after installation

• Check according to the following requirement after finishing installation.

Items to be checked	Possible malfunction
Has the unit been installed firmly?	The unit may drop, shake or emit noise.
Have you done the refrigerant leakage test?	It may cause insufficient cooling (heating) capacity.
Is heat insulation of pipeline sufficient?	It may cause condensation and water dripping.
Is water drained well?	It may cause condensation and water dripping.
Is the voltage of power supply accord- ing to the voltage marked on the nameplate?	It may cause malfunction or damaging the parts.
Is electric wiring and pipeline installed correctly?	It may cause malfunction or damaging the parts.
Is the unit grounded securely?	It may cause electric leakage.
Does the power cord follow the speci- fication?	It may cause malfunction or damaging the parts.
Is there any obstruction in the air inlet and outlet?	It may cause insufficient cooling (heating) capacity.
The dust and sundries caused during installation are removed?	It may cause malfunction or damaging the parts.
The gas valve and liquid valve of connection pipe are open completely?	It may cause insufficient cooling (heating) capacity.
Is the inlet and outlet of piping hole been covered?	It may cause insufficient cooling (heating) capacity or waster eletricity.

Test operation

1. Preparation of test operation

- The client approves the air conditioner.
- Specify the important notes for air conditioner to the client.

2. Method of test operation

- Put through the power, press ON/OFF button on the remote controller to start operation.
- Press MODE button to select AUTO, COOL, DRY, FAN and HEAT to check whether the operation is normal or not.
- If the ambient temperature is lower than 16° C , the air conditioner can't start cooling.

Configuration of connection pipe

Sheet 1 Max length of connection nine

- 1. Standard length of connection pipe
 - 5m, 7.5m, 8m
- Min length of connection pipe For the unit with standard connection pipe of 5m, there is no limitation for the min length of connection pipe. For the unit with standard connection pipe of 7.5m and 8m, the min length of connection pipe is 3m.

I Init m

3. Max length of connection pipe

Sheet 1 Max length of connection pipe			Unit: m	
capacity	Max length of connection pipe		capacity	Max length of connection pipe
5000Btu/h (1465W)	15		24000Btu/h (7032W)	25
7000Btu/h (2051W)	15		28000Btu/h (8204W)	30
9000Btu/h (2637W)	15		36000Btu/h (10548W)	30
12000Btu/h (3516W)	20		42000Btu/h (12306W)	30
18000Btu/h (5274W)	25		48000Btu/h (14064W)	30

4. The calculation method of additional refrigerant oil and refrigerant charging amount after prolonging connection pipe

After the length of connection pipe is prolonged for 10m at the basis of standard length, you should add 5ml of refrigerant oil for each additional 5m of connection pipe.

The calculation method of additional refrigerant charging amount (on the basis of liquid pipe):

- (1) Additional refrigerant charging amount= prolonged length of liquid pipe × additional refrigerant charging amount per meter
- (2) Basing on the length of standard pipe, add refrigerant according to the requirement as shown in the table. The additional refrigerant charging amount per meter is different according to the diameter of liquid pipe. See Sheet 2.

Diameter of connection pipe mm		Indoor unit throttle	Outdoor ur	nit throttle
Liquid pipe	Gas pipe	Cooling only, cooling and heating (g / m)	Cooling only (g / m)	cooling and heating (g / m)
Ф6	Φ9.5 or Φ12	16	12	16
Φ6 or Φ9.5	Ф16 or Ф19	40	12	40
Ф12	Ф19 or Ф22.2	80	24	96
Ф16	Φ25.4 or Φ31.8	136	48	96
Ф19	-	200	200	200
Φ22.2	-	280	280	280

Sheet 2. Additional refrigerant charging amount for R32

Note: The additional refrigerant charging amount in Sheet 2 is recommended value, not compulsory.


Pipe expanding method

Note:

Improper pipe expanding is the main cause of refrigerant leakage. Please expand the pipe according to the following steps:

A: Cut the pipe


- Confirm the pipe length according to the distance of indoor unit and outdoor unit.
- Cut the required pipe with pipe cutter.

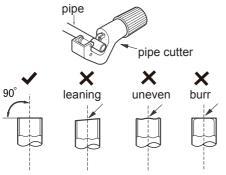


- B: Remove the burrs
- Remove the burrs with shaper and prevent the burrs from getting into the pipe.



- C: Put on suitable insulating pipe
- D: Put on the union nut
- Remove the union nut on the indoor connection pipe and outdoor valve; install the union nut on the pipe.

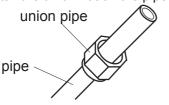

- E: Expand the port
- Expand the port with expander.

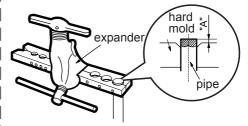


Note:

• "A" is different according to the diameter, please refer to the sheet below:

Outer diameter	A(mm)		
(mm)	Max	Min	
Ф6 - 6.35(1/4")	1.3	0.7	
Ф9.52(3/8")	1.6	1.0	
Ф12-12.7(1/2")	1.8	1.0	
Ф15.8-16(5/8")	2.4	2.2	

- F: Inspection
- Check the quality of expanding port. If there is any blemish, expand the port again according to the steps above.



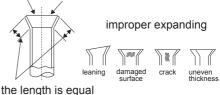

38


Instruction

Symbol	Symbol Color	Symbol	Symbol Color	Symbol	Name
WH	White	GN	Green	CAP	Jumper cap
YE	Yellow	BN	Brown	COMP	Compressor
RD	Red	BU	Blue		Grounding wire
YEGN	Yellow/Green	BK	Black	1	1
VT	Violet	OG	Orange	1	1

Note: Jumper cap is used to determine fan speed and the swing angle of horizontal lover for this model.

Indoor Unit

ASH-09BIF/I, ASH-13BIF/I

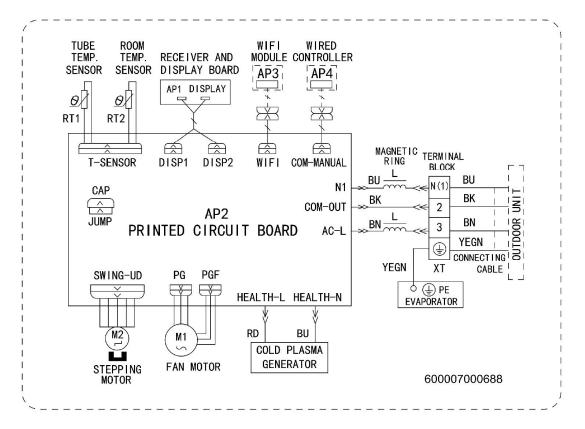


Instruction

Symbol	Symbol Color	Symbol	Symbol Color	Symbol	Name
WH	White	GN	Green	CAP	Jumper cap
YE	Yellow	BN	Brown	COMP	Compressor
RD	Red	BU	Blue		Grounding wire
YEGN	Yellow/Green	BK	Black	1	1
VT	Violet	OG	Orange	1	1

Note: Jumper cap is used to determine fan speed and the swing angle of horizontal lover for this model.

Indoor Unit

ASH-18BIF/I, ASH-24BIF/I

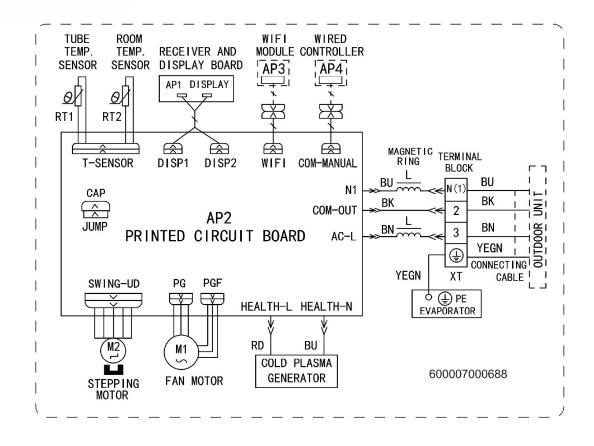

INDOOR UN	TI
Model	ASH-09BIF
Rated Voltage	220-240V~
Rated Frequency	50Hz
Cooling Capacity	2600W
Heating Capacity	2800W
Air Flow Volume	560m ³ /h
Sound Pressure Level(H)	36dB(A)
Weight	9kg
Manufactured Date	0
sincla	IR ®
Producer: SINCLAIR CORPORATION Ltd, 1 Representative: SINCLAIR EUROPE spol. s r. Purkynova 45, 612 00 Brno, C	0.,
CERA	229983532

Ś	inc	Lair	
AIR CON	DITION	ER OUTDOOR UNI	Т
Model			<u>H-09BIF</u>
Rated Voltage 22	0-240V~	Cooling Capacity	2600W
Rated Frequency	50Hz	Heating Capacity	2800W
Climate Type	T1	Cooling Power Input	805W
Weight	29.5kg	Heating Power Input	755W
Isolation	Ĩ	Cooling Rated Input	1400W
Refrigerant	R32	Heating Rated Input	1500W
Refri. Charge	0.60kg	Sound Pressure Level	52dB(A)
GWP	675	CO2 equivalent 0.	41tonnes
Moisture Protectio			IPX4
Maximum Alloy			4.3MPa
Operating Pressu Operating Pressu			4.3MPa 2.5MPa
Manufactured Date Contains fluorinated g Producer: SINCLAIR CO	reenhouse ga		к
		6322998353	

SPLIT AIR CONDI	TIONER
INDOOR UN	TI
Model	ASH-13BIF
Rated Voltage	220-240V~
Rated Frequency	50Hz
Cooling Capacity	3500W
Heating Capacity	3670W
Air Flow Volume	680m ³ /h
Sound Pressure Level(H)	38dB(A)
Weight	10.5kg
Manufactured Date	0
sincla	
Producer: SINCLAIR CORPORATION Ltd, 1- Representative: SINCLAIR EUROPE spol. s r. Purkynova 45, 612 00 Brno, C.	0.,
	229983534


		Lair	
	DITION	ER OUTDOOR UNI'	-
Model			I-13BIF
Rated Voltage 22	0-240V~	Cooling Capacity	3500W
Rated Frequency	50Hz	Heating Capacity	3670W
Climate Type	T1	Cooling Power Input	1085W
Weight	31kg	Heating Power Input	990W
Isolation	I	Cooling Rated Input	1400W
Refrigerant	R32	Heating Rated Input	1500W
Refri. Charge		Sound Pressure Level	53dB(A)
GWP	675	CO2 equivalent 0.4	7tonnes
Moisture Protectio			IPX4
Maximum Allow			4.3MPa
Operating Pressu			4.3MPa
Operating Pressu	re for th	e Suction Side	2.5MPa
Manufactured Date			
Contains fluorinated g	reenhouse ga	ISES	_
Producer: SINCLAIR CO Representative: SINCLA	RPORATIO	N Ltd, 1-4 Argyll St., London, UK spol. s r.o., Purkynova 45, 612 00	Brno. CZ
Representativeron cent	Λ		
	$-\Lambda$		
	13		
		6322998353	5


SPLIT AIR CONDI	TIONER
INDOOR UN	IT
Model	ASH-18BIF
Rated Voltage	220-240V~
Rated Frequency	50Hz
Cooling Capacity	5130W
Heating Capacity	5280W
Air Flow Volume	850m ³ /h
Sound Pressure Level(H)	44dB(A)
Weight	13.5kg
Manufactured Date	0
sinclai	B®
Producer: SINCLAIR CORPORATION Ltd, 1- Representative: SINCLAIR EUROPE spol. sr.c Purkynova 45, 612 00 Brno, C2	l.,
∕ ↔ (€ 🖾 🏢	
	229983536


sinclai	R [®] AIR CO	ONDITIONER OUTD	OOR UNIT
Model		ASH-18BIF	
Rated Voltage	220-240V~	Cooling Capacity	5130W
Rated Frequency	50Hz	Heating Capacity	5280W
Climate Type	T1	Cooling Power Input	1580W
Weight	39kg	Heating Power Input	1420W
Isolation	Ι	Cooling Rated Input	2100W
Refrigerant	R32	Heating Rated Input	2300W
Refri. Charge	0.90kg	CO ₂ equivalent	0.61tonnes
GWP	675	Sound Pressure Level	56dB(A)
Maximum Allow	able Pressu	re	4.3MPa
Operating Pressu	ıre (Dischar	ge Side/Suction Side)	4.3/2.5MPa
Manufactured Date	2017.01	Moisture Protection	IPX4
Contains Producer: SIN Representative	fluorinated gi CLAIR CORPORAT : SINCLAIR EUROJ	reenhouse gases ION Ltd, 1-4 Argyll St., London, UK PE spol. s r.o., Purkynova 45, 612 00 Bi	rno, CZ


SPLIT AIR COND	ITIONER		
INDOOR UN	IT		
Model	ASH-24BIF		
Rated Voltage	220-240V~		
Rated Frequency	50Hz		
Cooling Capacity	6450W		
Heating Capacity	6450W		
Air Flow Volume	1250m ³ /h		
Sound Pressure Level(H)	44dB(A)		
Weight	16.5kg		
Manufactured Date			
sincla	IR ®		
Producer: SINCLAIR CORPORATION Ltd, 1- Representative: SINCLAIR EUROPE spol. s r. Purkynova 45, 612 00 Brno, C.	0.,		
	229983538		

Model	ASH-24BIF		
Rated Voltage	220-240V~	Cooling Capacity	6450W
Rated Frequency	50Hz	Heating Capacity	6450W
Climate Type	T1	Cooling Power Input	1950W
Weight	52.5kg	Heating Power Input	1735W
Isolation	Ι	Cooling Rated Input	3000W
Refrigerant	R32	Heating Rated Input	3100W
Refri. Charge	1.70kg	CO ₂ equivalent	1.15tonnes
GWP	675	Sound Pressure Level	58dB(A)
Maximum Allowable Pressure		4.3MPa	
Operating Pressure (Discharge Side/Suction Side)		4.3/2.5MPa	
Manufactured Date	2017.01	Moisture Protection	IPX4
Producer: SINCL	AIR CORPORATION	e nhouse gases v Ltd, 1-4 Argyll St., London, UK pol. s r.o., Purkynova 45, 612 00 Brno, u 1111 1111	

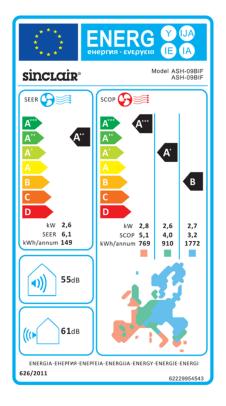

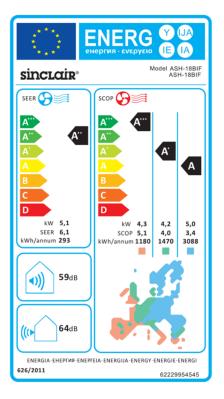

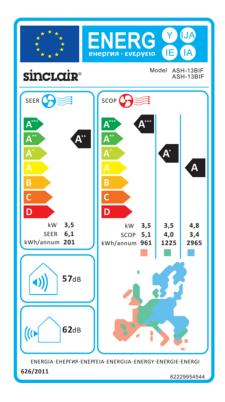

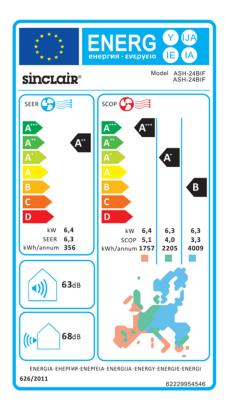

NOTE CONCERNING PROTECTION OF ENVIRONMENT



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

INFORMATION CONCERNING USED REFRIGERANT MEDIUM

This unit is containing fluorinated gases included in the Kyoto protocol. The maintenance and the liquidation must be carried out by qualified personnel. Type of refrigerant: R32

The quantity of the refrigerant: please see the unit label. The value GWP: 675 (1 kg R32 = $0,675 \text{ t CO}_2 \text{ eq}$) GWP = Global Warming Potential



Appliance filled with flammable gas R32.

In case of quality problem or other please contact your local supplier or authorized service center. **Emergency number: 112**

PRODUCER

SINCLAIR CORPORATION Ltd. 1-4 Argyll St. London W1F 7LD Great Britain

www.sinclair-world.com

This product was manufactured in China (Made in China).

REPRESENTATIVE

SINCLAIR EUROPE spol. s r.o. Purkynova 45 612 00 Brno Czech Republic

TECHNICAL SUPPORT

NEPA spol. s r.o. Purkynova 45 612 00 Brno Czech Republic

Tel.: +420 800 100 285 Fax: +420 541 590 124

www.sinclair-solutions.com info@sinclair-solutions.com