


KEYBOARD

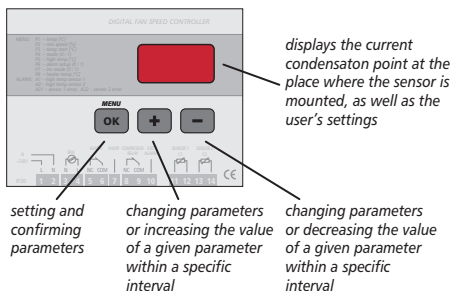

ALARMS

[P1] (A11) high temp

high condensation point, turns off the compressor, at the instant the alarm occurs, contacts 8, 9, are opened and contacts 9, 10 are closed; the **alarm can be cancelled** by pressing any key (or turning power off – see P6)

[P2] (A21) sensor error

temperature sensor failure

GRAPHS OF OPERATING MODES (P4)

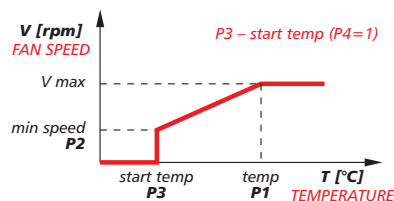
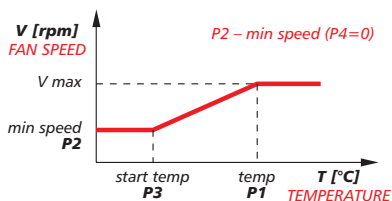


TABLE OF TEMPERATURE IN RELATION TO PRESSURE

temp. [°C]	-20	-18	-16	-14	-12	-10	-8	-6	-4	-2	0	2	4	6
R22 [bar]	1.44	1.63	1.84	2.06	2.29	2.53	2.79	2.06	3.35	3.65	3.97	4.30	4.65	5.01
R407 [bar]	1.09	1.27	1.46	1.66	1.88	2.11	2.36	2.62	2.89	3.18	3.49	3.81	4.15	4.51
R410 [bar]	2.97	3.28	3.61	3.96	4.32	4.71	5.11	5.54	5.99	6.47	6.96	7.48	8.03	8.61

temp. [°C]	8	10	12	14	16	18	20	22	24	26	28	30	32	34
R22 [bar]	5.40	5.80	6.22	6.66	7.11	7.59	8.09	8.61	9.15	9.71	10.29	10.90	11.53	12.19
R407 [bar]	4.89	5.29	5.71	6.15	6.61	7.09	7.59	8.12	8.68	9.25	9.86	10.49	11.15	11.80
R410 [bar]	9.21	9.84	10.50	11.18	11.90	12.66	13.44	14.26	15.11	16.00	16.92	17.89	18.89	19.93

temp. [°C]	36	38	40	42	44	46	48	50	52	54	56	58	60	62
R22 [bar]	12.87	13.58	14.31	15.07	15.86	16.67	17.52	18.39	19.29	20.23	21.20	22.20	23.23	24.20
R407 [bar]	12.55	13.30	14.08	14.89	15.74	16.62	17.53	18.48	19.47	20.50	21.57	22.68	23.83	25.03
R410 [bar]	21.01	22.13	23.30	24.51	25.76	27.05	28.40	29.78	31.22	32.70	34.23	35.81	37.43	39.11

TECHNICAL DATA

supply voltage ~230V
 fan maximum current 3A
 maximum feed current
 compressor crankcase heaters (terminals 5, 6) 4A
 maximum feed current
 compressor contactor coils (terminals 8, 9, 12) 4A
 working temp. of the device: from -30°C to +70°C

the package includes:

SC4 controller (1); temperature sensor (2); self-adhesive insulation tape (1); terminal block (1); band clip (2); metal sheet screw (2)

factory settings and range of available settings:

P1 = 45°C 1 – 55°C (P1 > P3)
 P2 = 20% 1 – 99 %
 P3 = 30°C 1 – 54°C (P3 < P1)
 P4 = 0 0 – min speed or 1 – start temp
 P5 = 60°C 56 – 80°C
 P6 = 0 0 or 1
 P7 = 0 0 or 1
 P8 = 4°C 0 – 10°C
 P9 = 1 sek 0 – 10 sec.

DIGITAL FAN SPEED CONTROLLER

operating manual



Before connecting and activating the device, please read these operating instructions and keep them for future reference

– NEW FUNCTIONS



The controller has new very useful functions:

- monitoring and visualisation **outdoor temperature**;
- **second sensor C2** (optional);
- **full heater control** (5, 6 contacts) on basis of the outdoor temperature;
- setting of **hard start** (0 – 10sec.), P9 parameter;
- changes of of the connection (see connection diagram).

HOW THE CONTROLLER WORKS

The controller is adapted to work in devices requiring **smooth control of rotation speed of the fan motor** (or any other element connected to contacts 3 and 4) **on the basis of temperature measurements** (sensor C1 - contacts 11, 12). According to the entered parameters, the controller increases or decreases the fan speed in order to maintain the required temperature measured by the sensor C1. If the measured temperature exceeds the temperature set by the user **[P3]** (P3), fan speed will be increased - to maximum, if need be. If the measured temperature is still higher than the set temperature **[P1]** (P1) and reaches the alarm limit set by the user **[P5]** (P5) – then the power feed to the compressor contactor coil (or any other element connected to contacts 8 and 9) will be cut off. This is a failure condition and will be signalled by the alarm symbol **[P1]** (A11) flashing on the display panel. Return to normal operating mode is possible after the alarm has been cancelled, by pressing any key (or turning power off – see P6). If the measured temperature is lower than the **[P1]** (P1), fan speed will be reduced – to minimum **[P3]** (P3), if need be. The most common use of the controller is to control the condenser fan motor in air conditioning, cooling and cooling-heating devices.

OPTION: If second sensor (C2 - contacts 13, 14) is connected, the controller can control heater connected to contacts 5, 6. If the measured temperature exceeds the temperature set by the user **[P8]** (P8), then the contacts 5, 6 are opened. To check outdoor temperature, press and hold down **[P8]** key.

CAUTION: This function will be work properly, if controller is always connected to the 230V AC power supply.

CAUTION: If second sensor C2 is NOT connected (C2 - contacts 13, 14), controller smooth controls of rotation speed of the fan motor and contacts 5, 6 are closed.

FUNCTIONS

The controller performs the following tasks:

- maintaining a constant condensation point
- extending the life cycle of the compressor
- **controlling and powering the compressor crankcase heater on basis of temperature measurements – sensor C2**
- monitoring and visualisation of the current condensation point – with no need to connect pressure gauges
- smooth control of fan speed, with simultaneous compressor activation, or with compressor activation on reaching a previously set temperature (condensation point)
- preventing a high condensation point and displaying alarm conditions


■ INSTALLATION

In order to ensure correct operation of the controller, you should:

- disconnect the factory-made power supply cables from the fan and connect them to contacts 3, 4 in the controller;
- connect the power supply and control cables in accordance with the description (below);
- mount the sensor on the fourth (sixth at the furthest – counting from the top - where the temp is constant) elbow of the condenser. The sensor must adhere to the elbow with its whole surface. Fasten the sensor with the band clips and insulate it with the insulation tape supplied with the controller.
- connect additional wire from 4WAY valve to contacts 7 (see description below),

CAUTION: When the controller is installed in a device that has a four-way valve (heat pump), the controlling signal should be connected

■ CONNECTION DIAGRAM

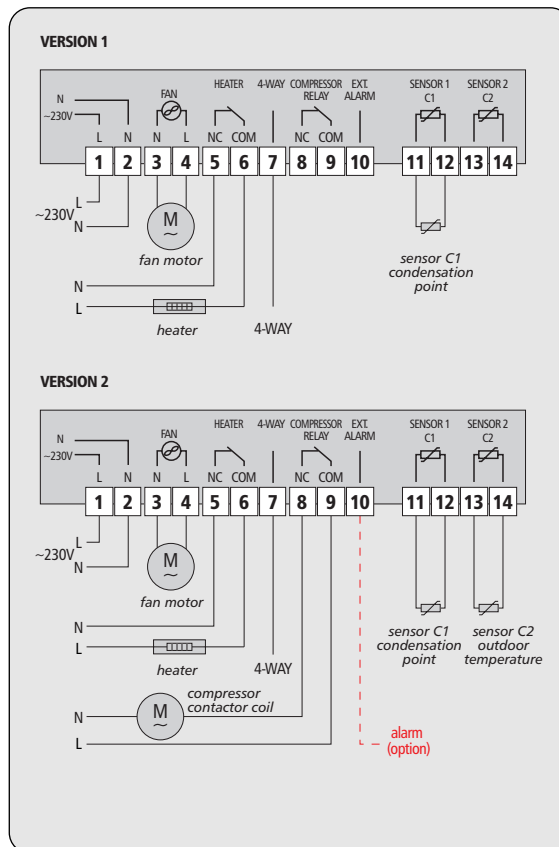


from the **four-way valve** to terminal **no. 7**. On appearance of voltage (230V) from the 4-WAY valve, the controller is by-passed. Voltage is passed directly to the condenser fan motor.

CAUTION: CONTACT 1 IS CONNECTED TO CONTACT 2.

CAUTION: THE CONTROLLER MAY BE INSTALLED ONLY BY QUALIFIED PERSONNEL, WHO HAVE THE NECESSARY AUTHORISATION – REQUIRED BY THE REGULATIONS IN FORCE IN THE COUNTRY WHERE THE CONTROLLER IS BEING INSTALLED OR USED. BEFORE COMMENCING INSTALLATION, THE DEVICE ON WHICH THE CONTROLLER IS BEING INSTALLED MUST BE DISCONNECTED FROM THE POWER SUPPLY

terminal	description of the connection
1	controller power supply phase conductor
2	neutral conductor
3	neutral conductor feeding the fan motor
4	phase conductor feeding the fan motor
5	phase conductor feeding the compressor crankcase heater
6	phase conductor feeding the compressor crankcase heater
7	phase conductor from the 4-WAY valve
8	phase conductor feeding the contactor coil or compressor relay
9	phase conductor feeding the contactor coil or compressor relay
10	high condensation point alarm signalling
11,12	condensation point sensor plug
13,14	outdoor temperature sensor plug

CAUTION: CONTACT 2 IS CONNECTED TO CONTACT 3

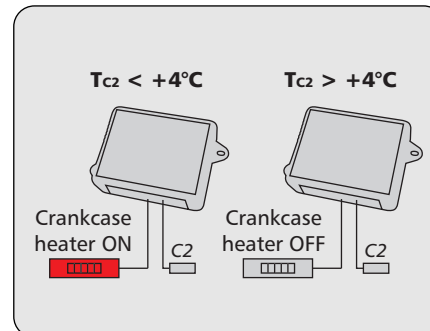

■ PROGRAMMING

After connecting the controller to the 230V AC power supply, the currently measured temperature will be displayed on the display panel. In order to facilitate operation of the device, it has been equipped with a keyboard (3 keys) and a display panel.

Step 1 – parameter setting mode

Press **OK**. The symbol of the first parameter:

P1 (P1).

Step 2 – selection of the parameter

Press **+**, to select a parameter (P1 – P9).

There are nine parameters to choose from:

- P1** (P1) **temp [°C]**
setting the condensation point
- P2** (P2) **min speed [%]**
minimum fan speed at power startup
- P3** (P3) **start temp [°C]**
temperature at which fan is to start up
- P4** (P4) **mode**
operating mode selection: min speed (0) or start temp (1)
- P5** (P5) **high temp**
high temperature alarm threshold setting
- P6** (P6) **alarm setup**
the alarm can be cancelled by pressing any key or turn off and on power supply (see table below)

P7 (P7) **inv mode**

condition for heat pump mode (see table below)

P8 (P8) **heater temperature**

above this temperature heater is off (contacts 5, 6 are opened)

P9 (P9) **hard start**

duration of hard start (normally 1 sec, 0-10 sec)

Step 3 – changing parameter values

Press **OK**, then change the value using the **+** or **-** key. After setting the value, press **OK**, to save the new setting and return to the parameter symbol window.

Pressing and holding down **+** or **-** will **increase or reduce the values** being set.

Step 4 – switching to normal operating mode

Selection of the **P1** (P1) parameter and pressing **-** will switch the controller to **normal operating mode**, ie. displaying the current measured temperature.

20 seconds after the last pressing of any key, the controller will **automatically return to normal operating mode**.

P6	cancel alarm A1	compressor	display
P6=0	press any key turn off and on power SC4 (alarm A1 can not be cancelled)	on off	current temp. alarm „A1“
P6=1	press any key turn off and on power	on on	current temp. alarm „A1“

P7	contact 9	fan
P7=0	0V 230V	smooth control of fan speed maximum fan speed (heat pump)
P7=1	230V 0V	smooth control of fan speed maximum fan speed (heat pump)